



# KODA SIDING SYSTEM INSTALLATION MANUAL


## Contents

### 1 | Components


|                     |     |
|---------------------|-----|
| Horizontal Profiles | 1.1 |
| Vertical Profiles   | 1.2 |
| Universal Profiles  | 1.3 |

### 2 | Details


|                                                                      |      |
|----------------------------------------------------------------------|------|
| Horizontal Siding. Details of Junction to Window and Door. Option #1 | 2.1  |
| Horizontal Siding. Details of Junction to Window and Door. Option #2 | 2.2  |
| Horizontal Siding. Details of Junction to Window and Door. Option #3 | 2.3  |
| Horizontal Siding. Inside and Outside Corner Details                 | 2.4  |
| Horizontal Siding. Horizontal Starter and Finish Trim Details        | 2.5  |
| Horizontal Siding. Vertical Starting Details                         | 2.6  |
| Horizontal Siding. J Channel Detail                                  | 2.7  |
| Vertical Siding. Details of Junction to Window and Door. Option #1   | 2.8  |
| Vertical Siding. Details of Junction to Window and Door. Option #2   | 2.9  |
| Horizontal Siding. Starting Details                                  | 2.10 |
| Horizontal Siding. Corner Details                                    | 2.11 |

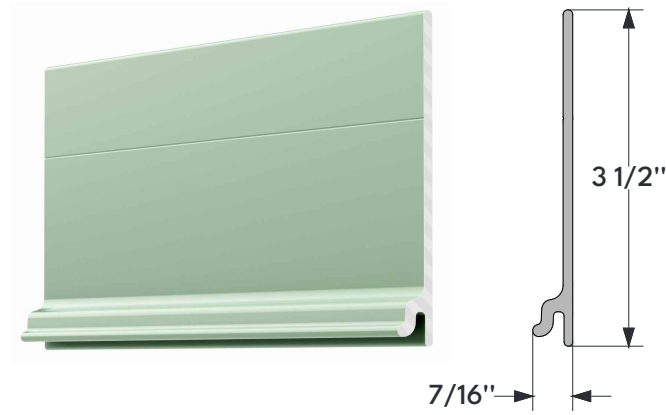


H1 Horizontal Starter

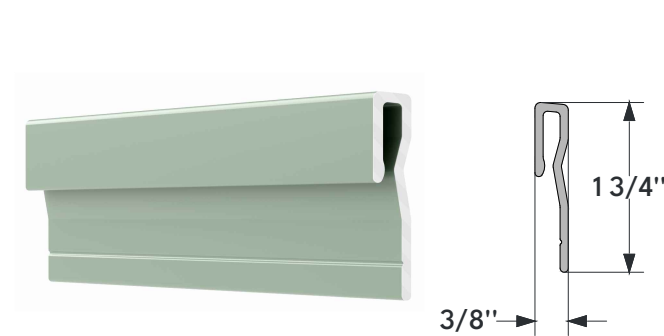


H2 Horizontal Finish Trim

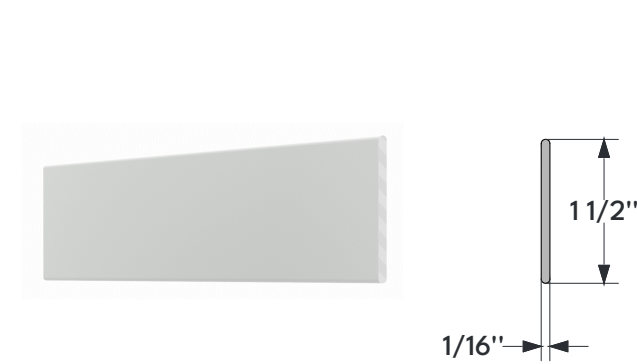


H3 Rainscreen Spacer

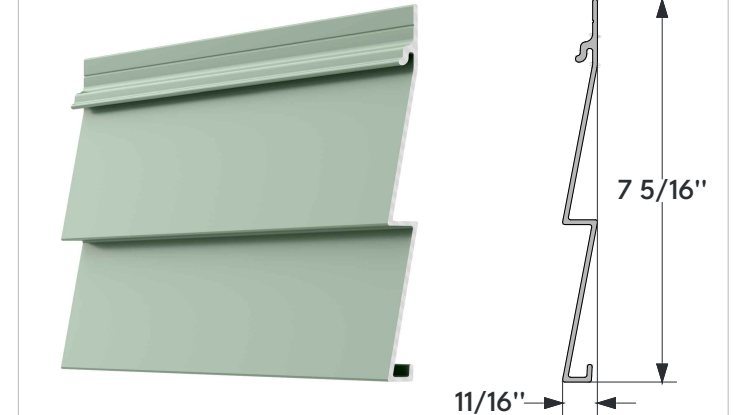


H4 3" Double Lap

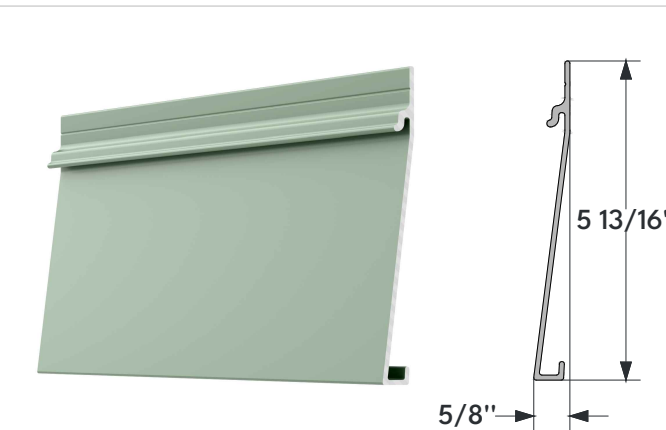


H5 4 1/2" Lap

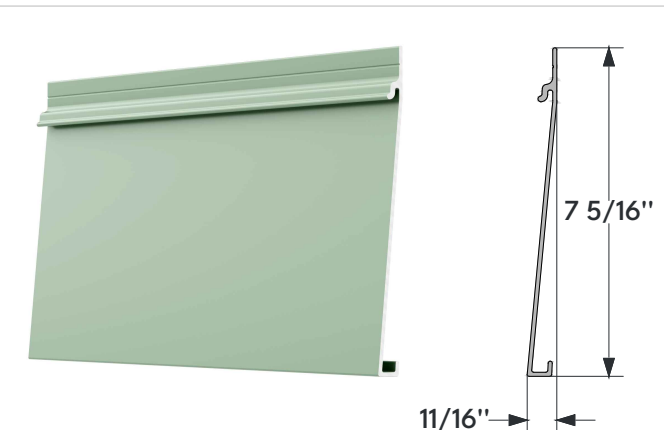


H6 6" Lap

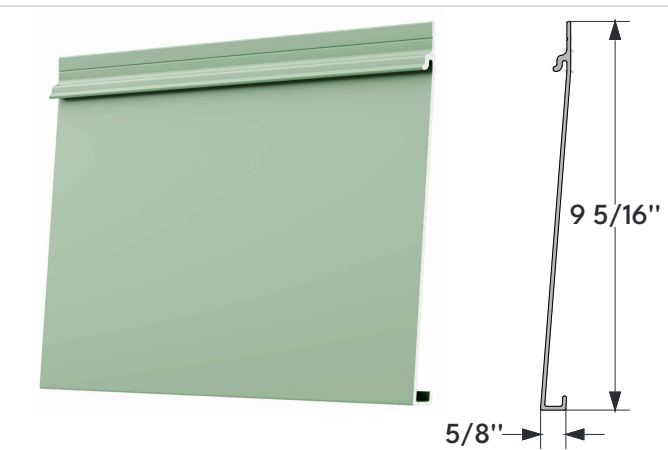


H7 8" Lap

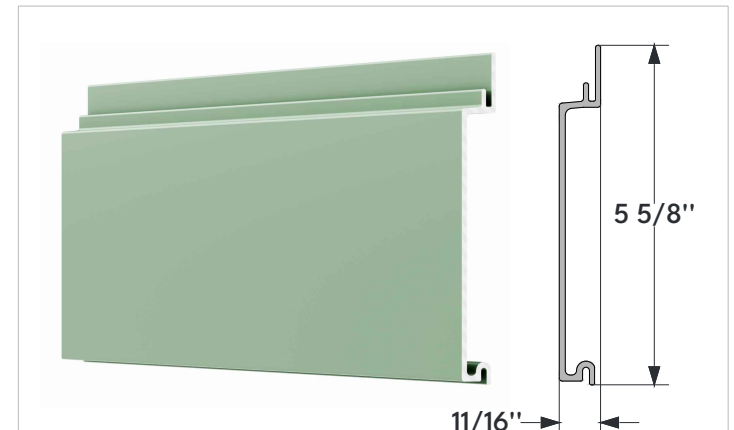





H8 4 5/8" Shiplap






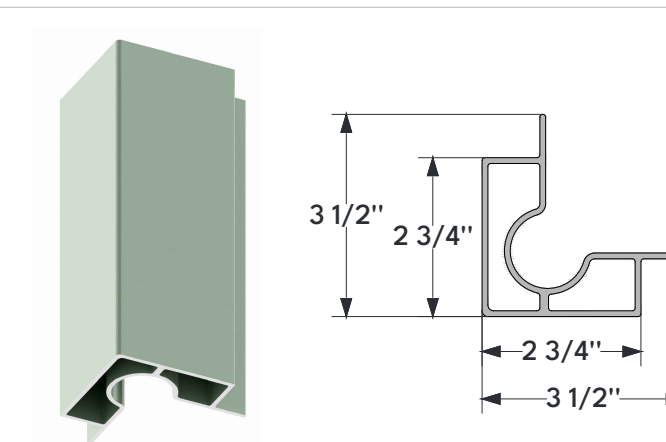



H9 Outside Corner

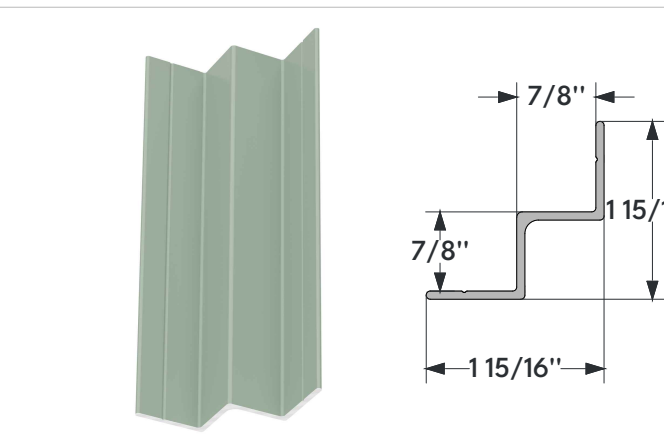

H10 Inside Corner

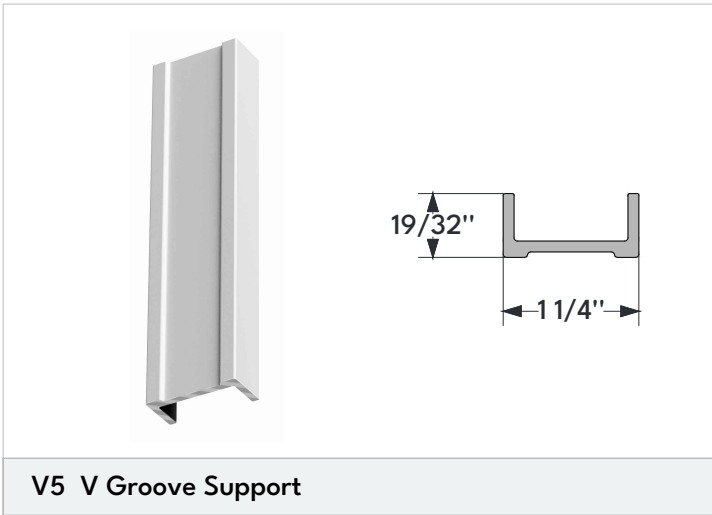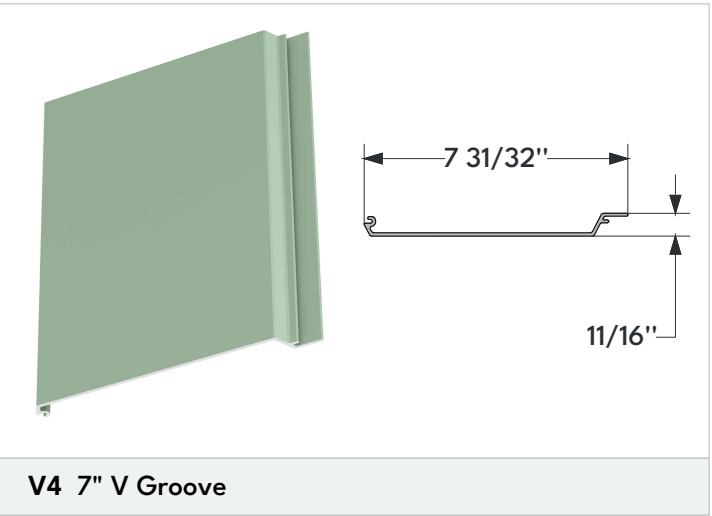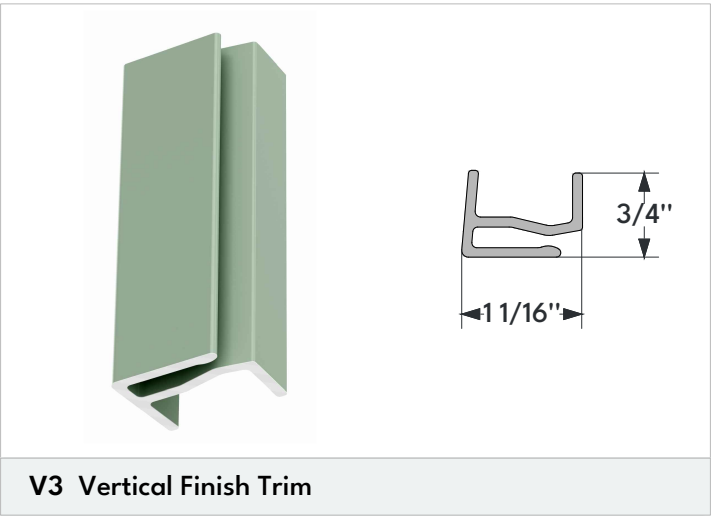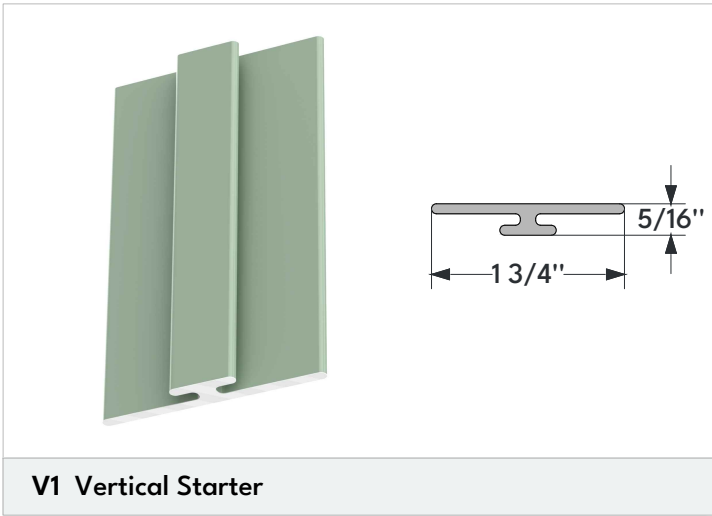


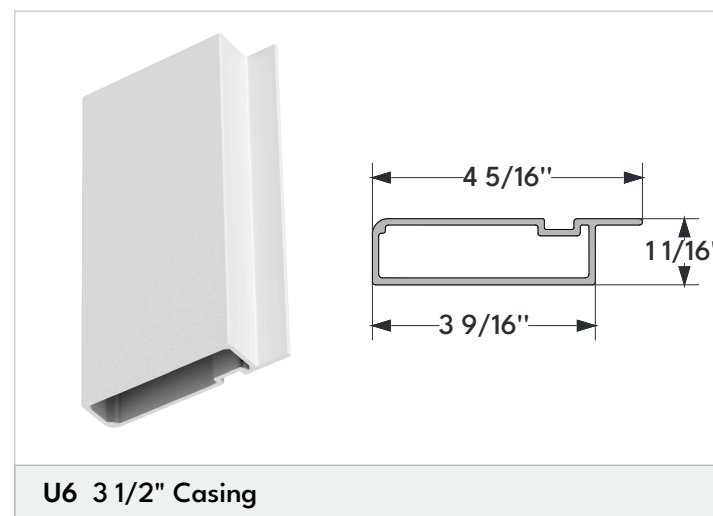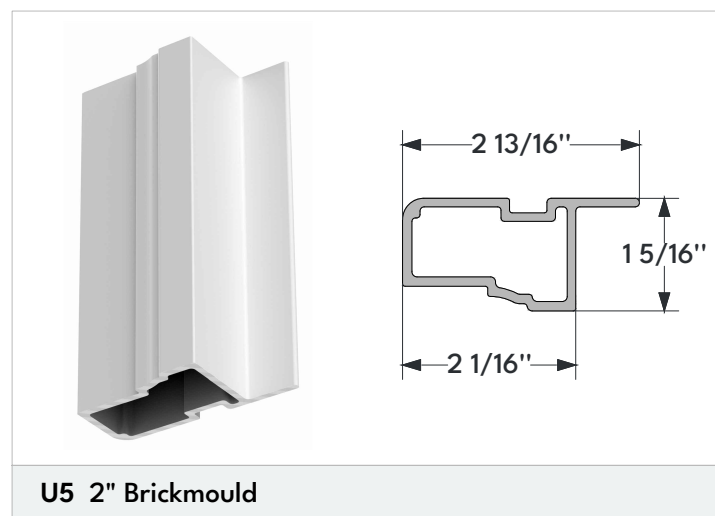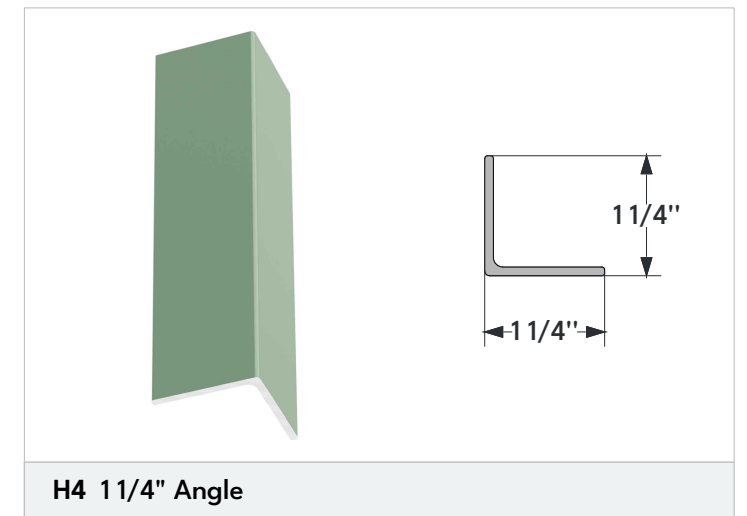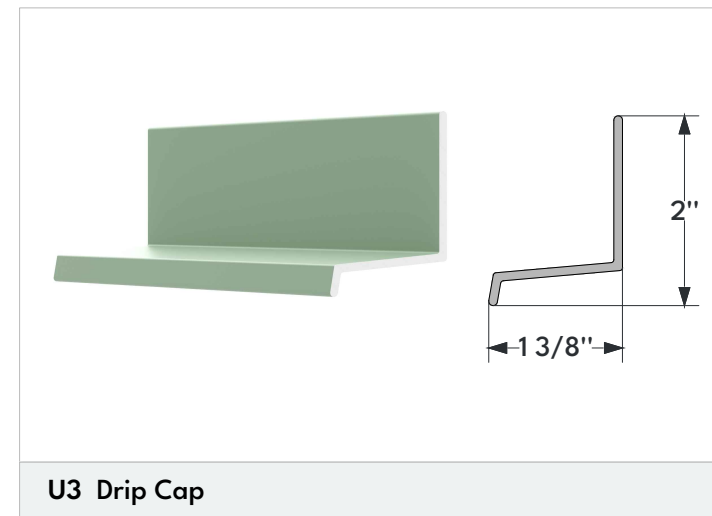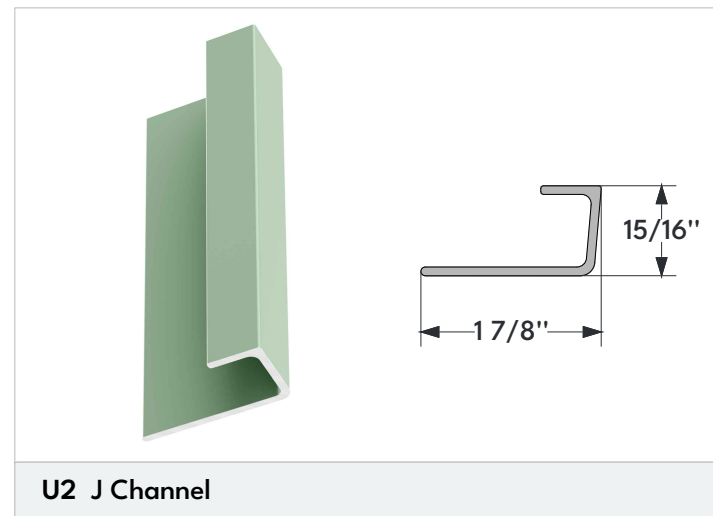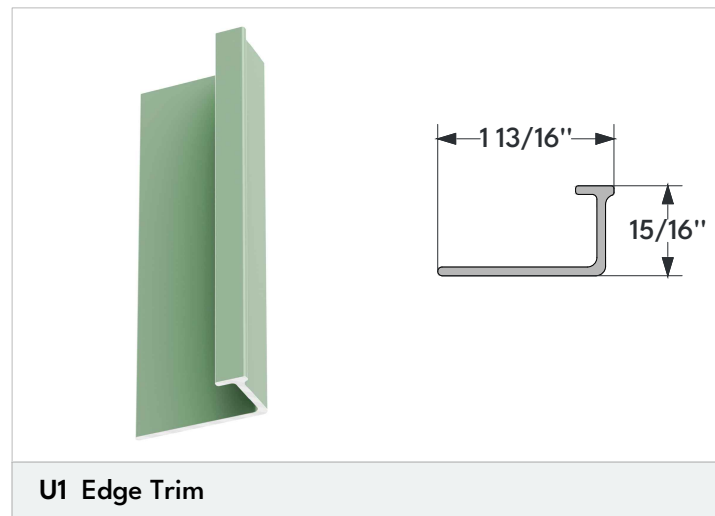

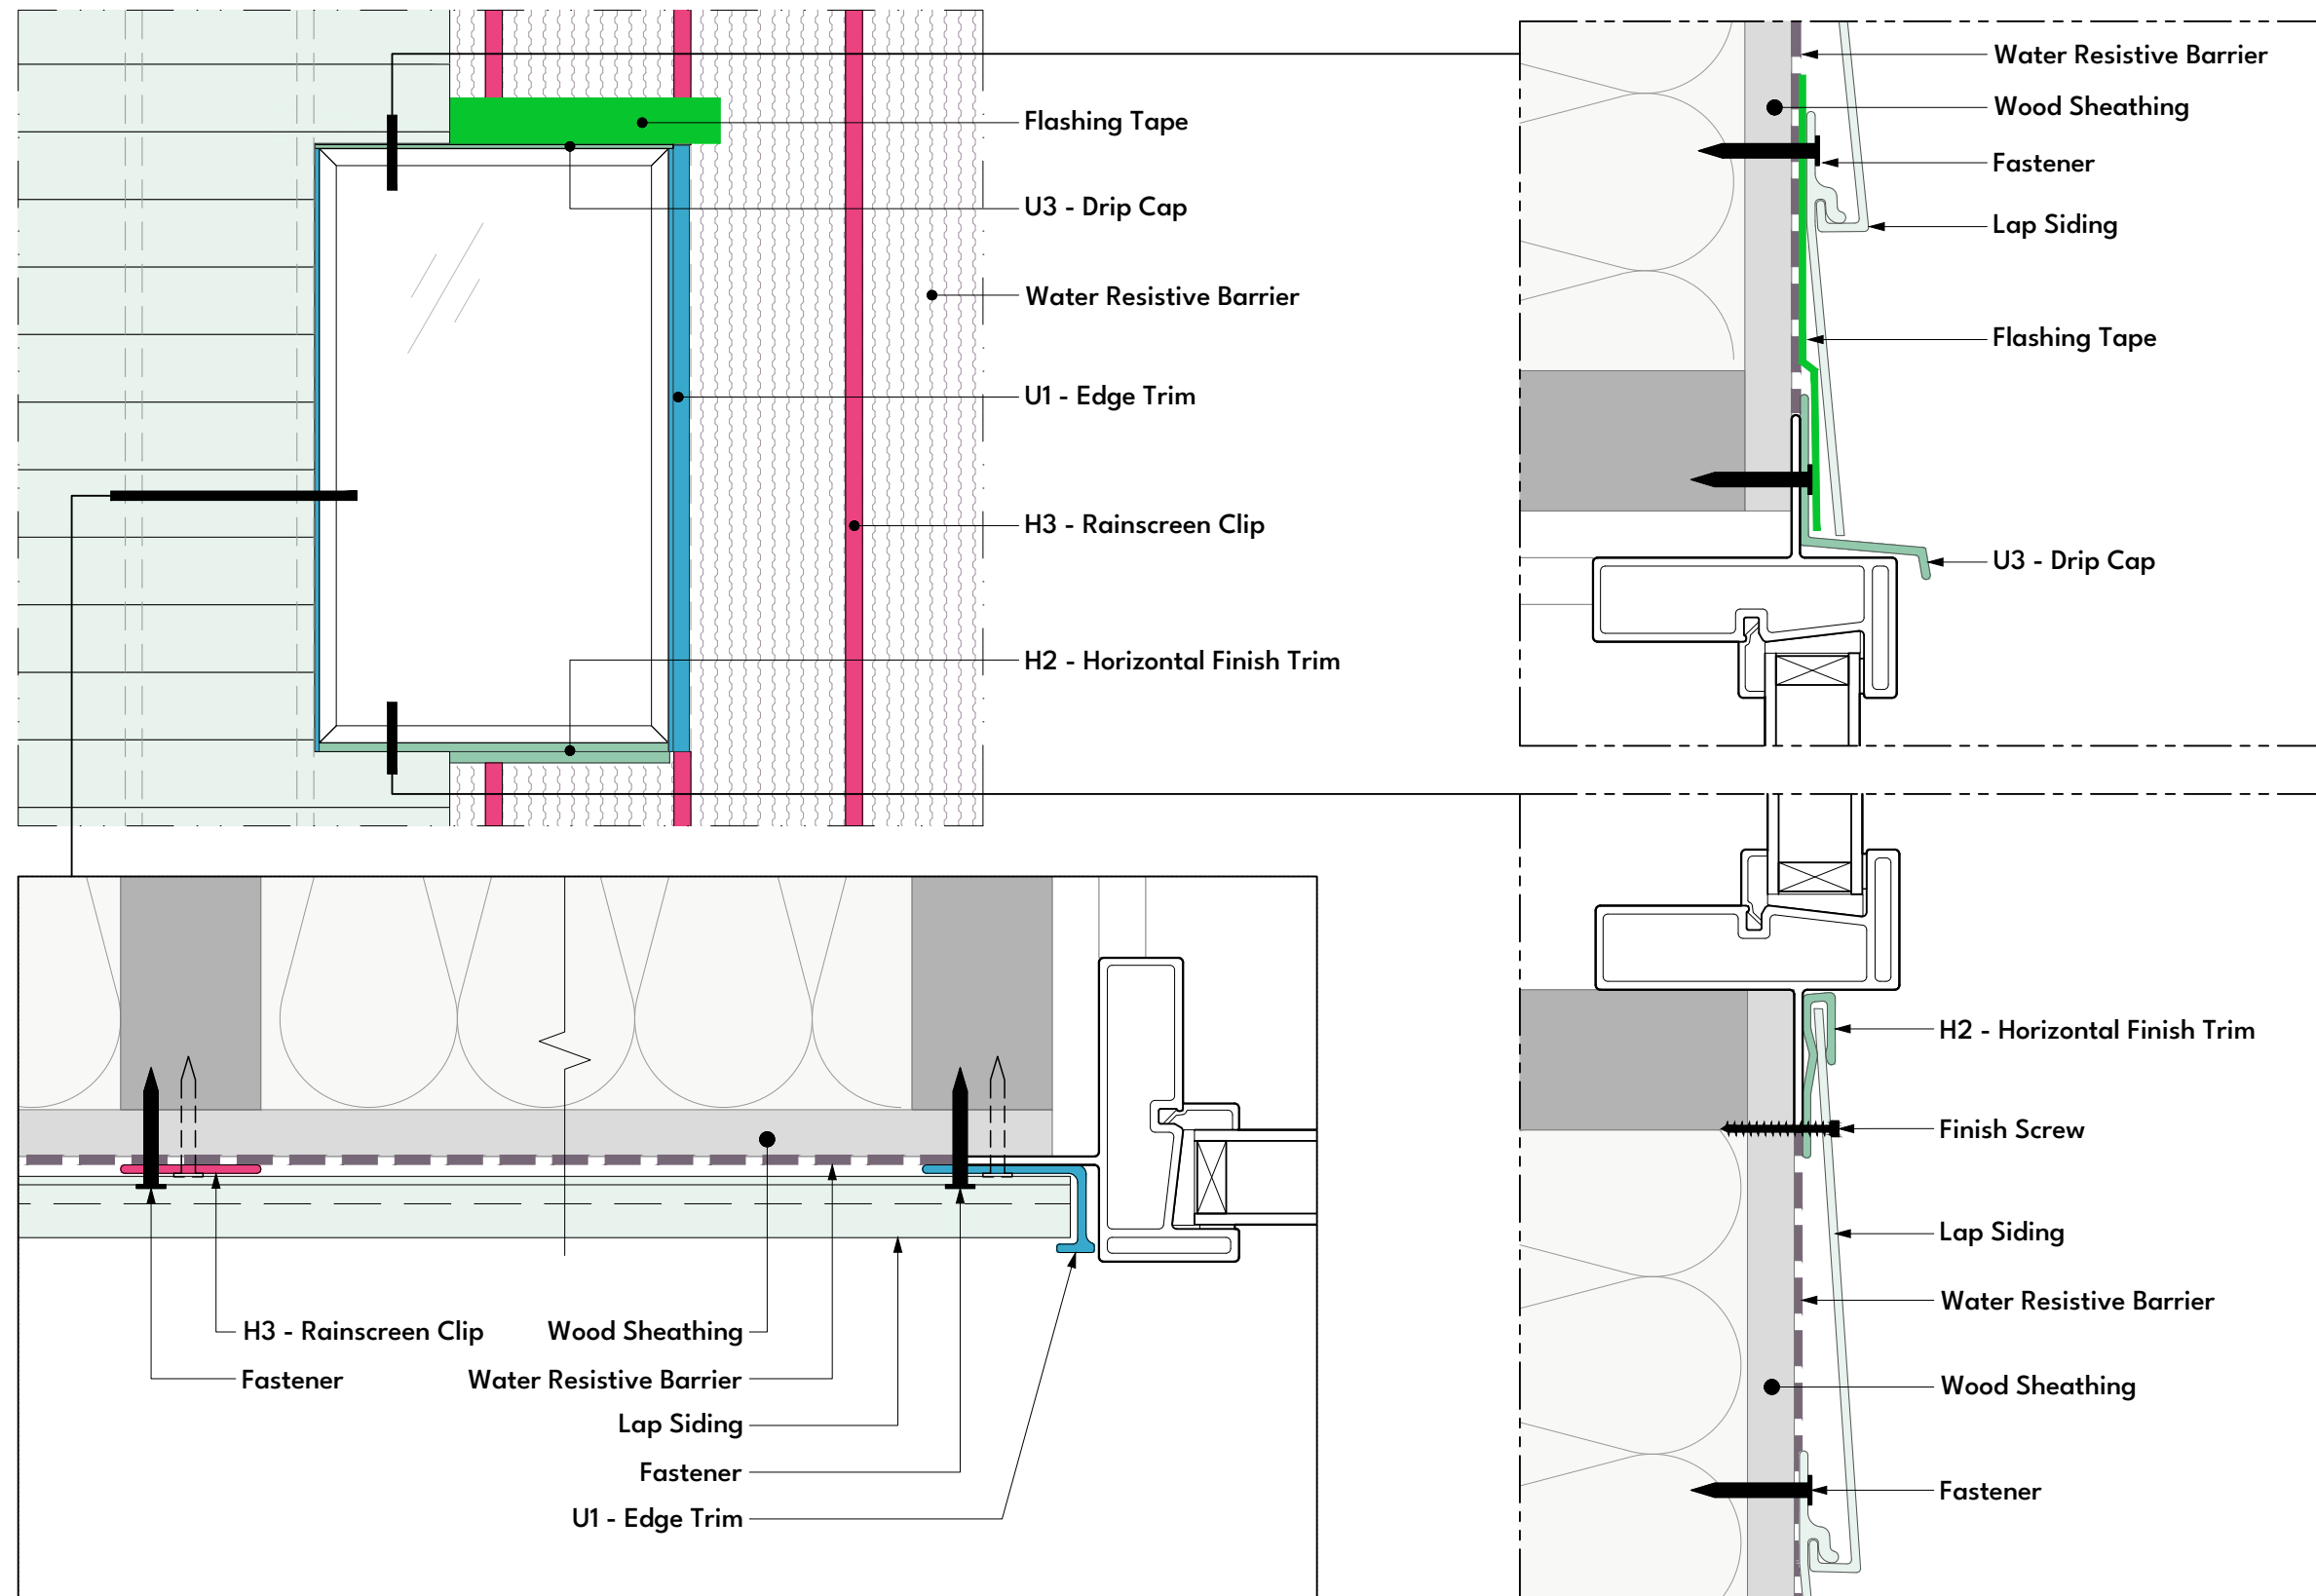


### NOTES:

- Windows and doors must be properly secured and flashed prior to siding installation.
- Water resistive barrier should be stapled on instead of cap nails.
- Fasteners should be 1 1/2" or longer

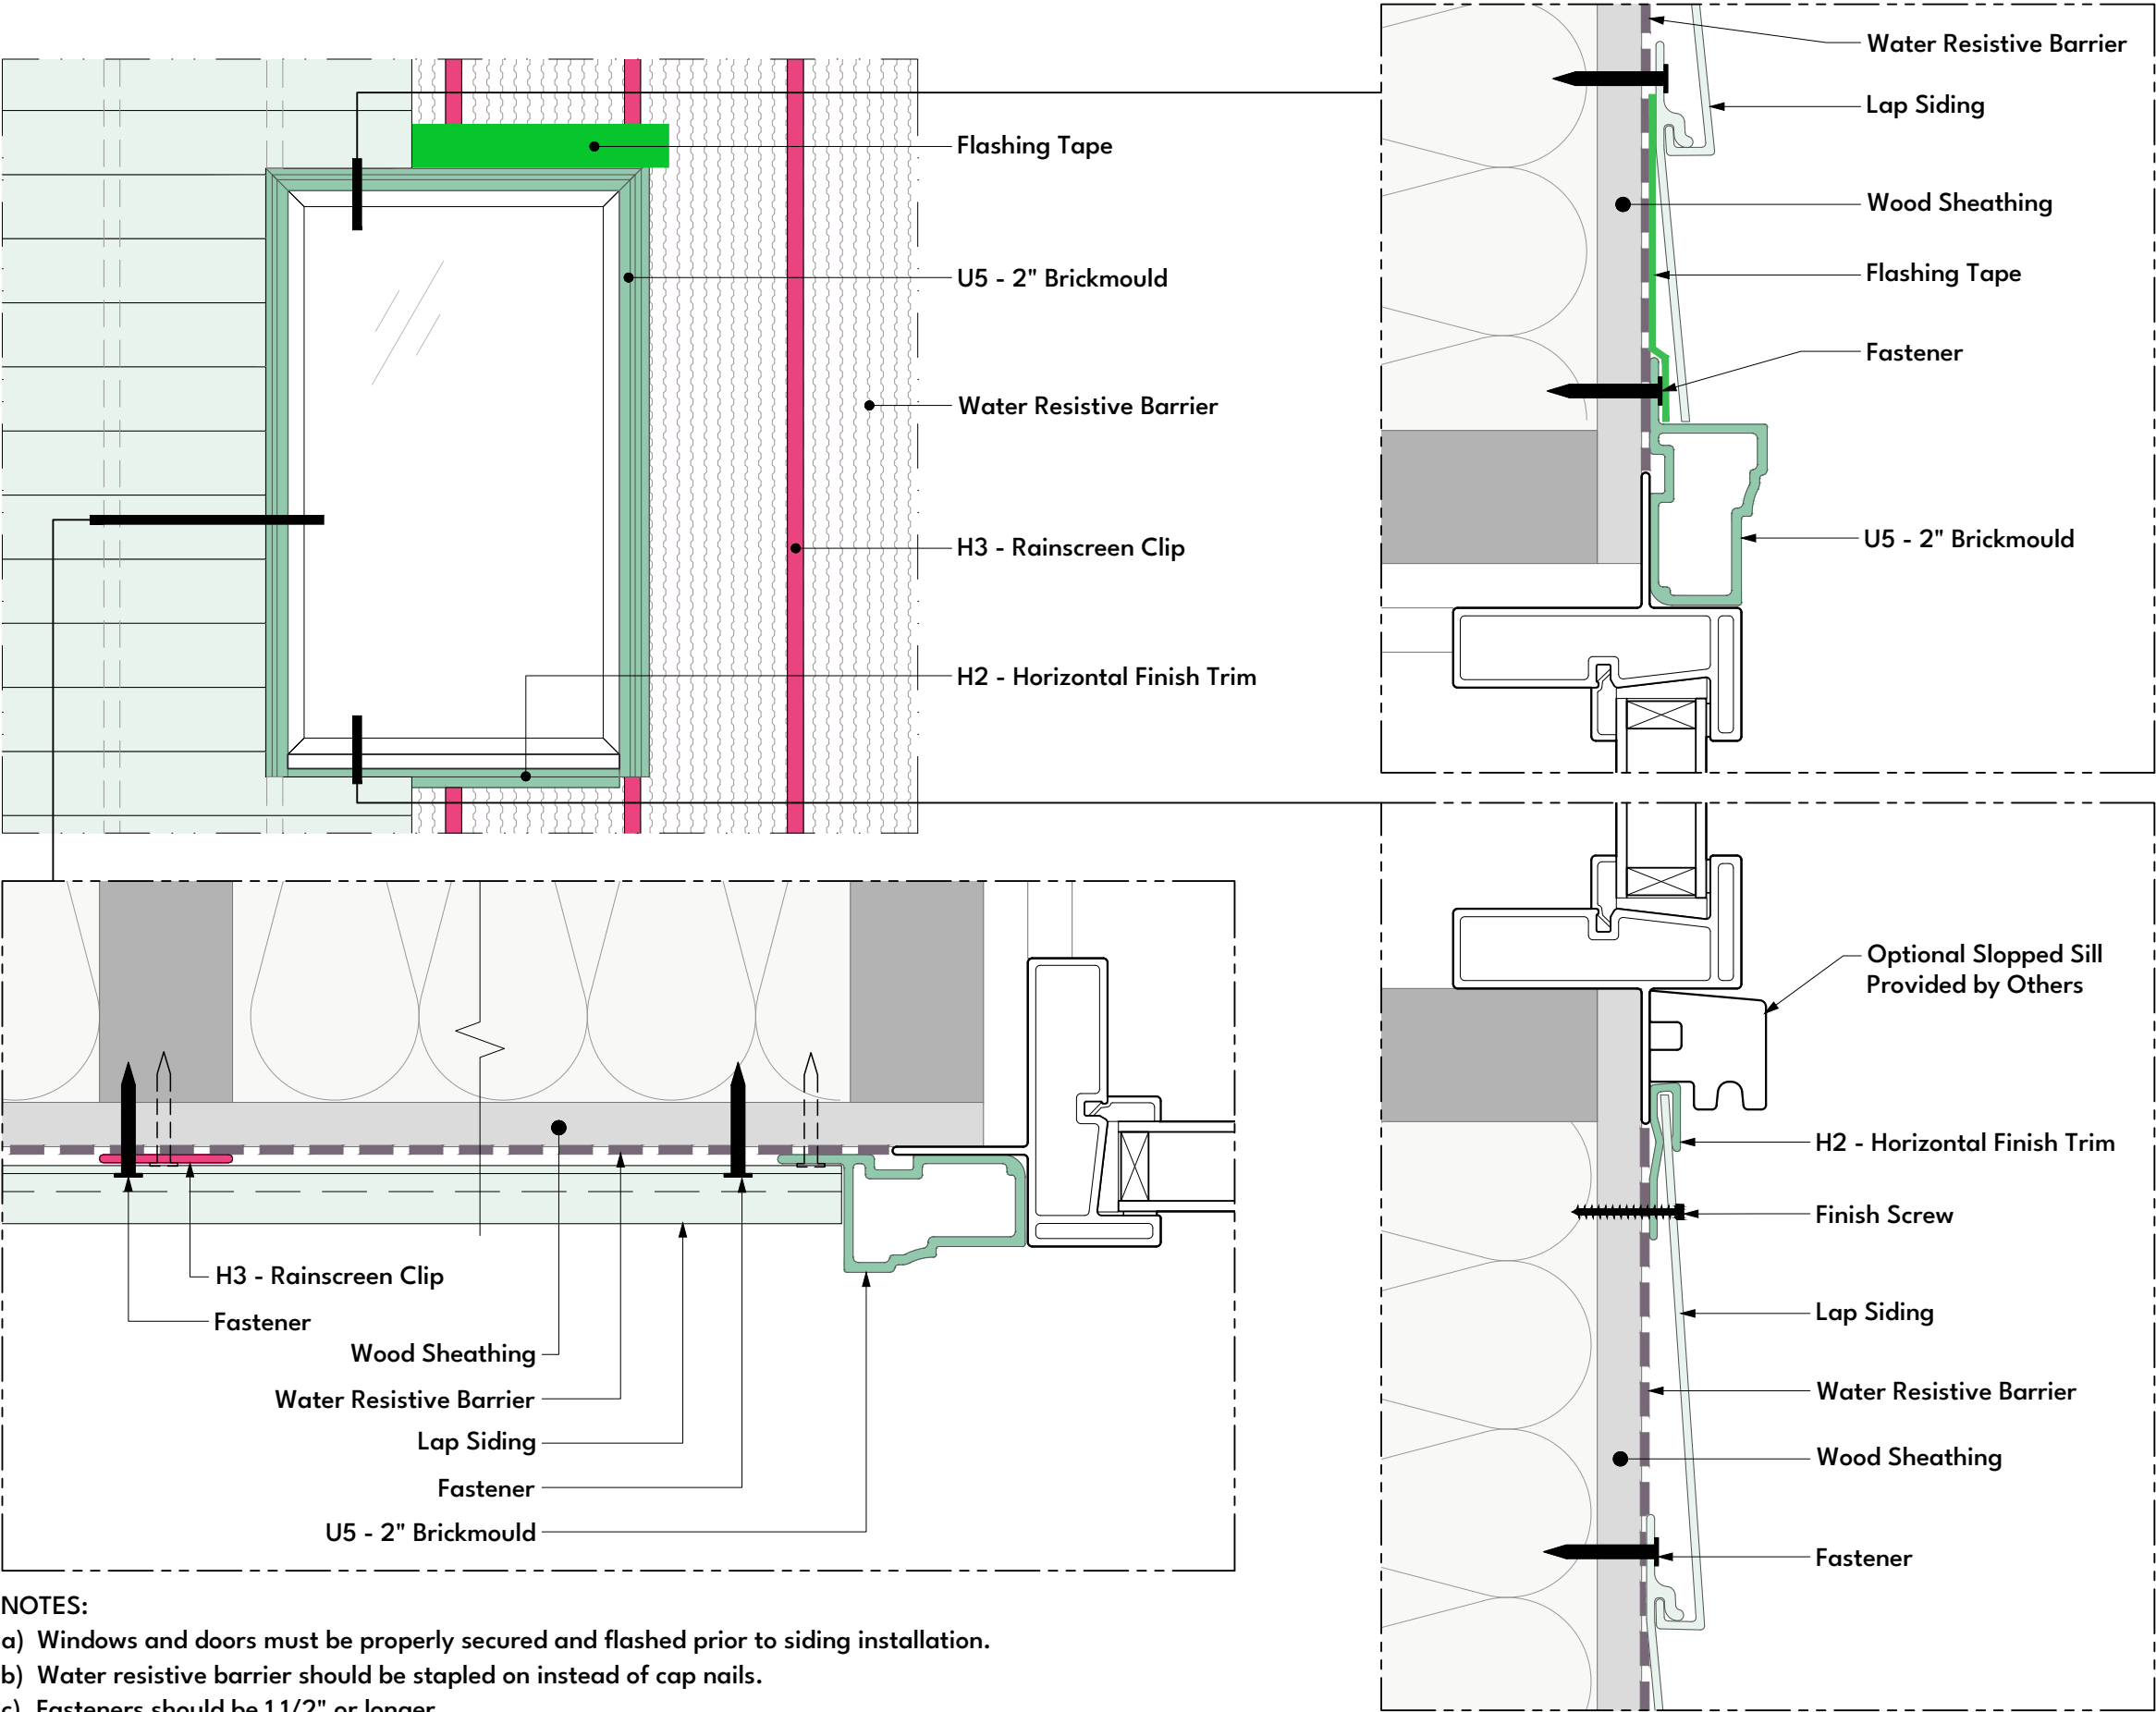


- NOTES:
- a) Windows and doors must be properly secured and flashed prior to siding installation.
  - b) Water resistive barrier should be stapled on instead of cap nails.
  - c) Fasteners should be 1 1/2" or longer

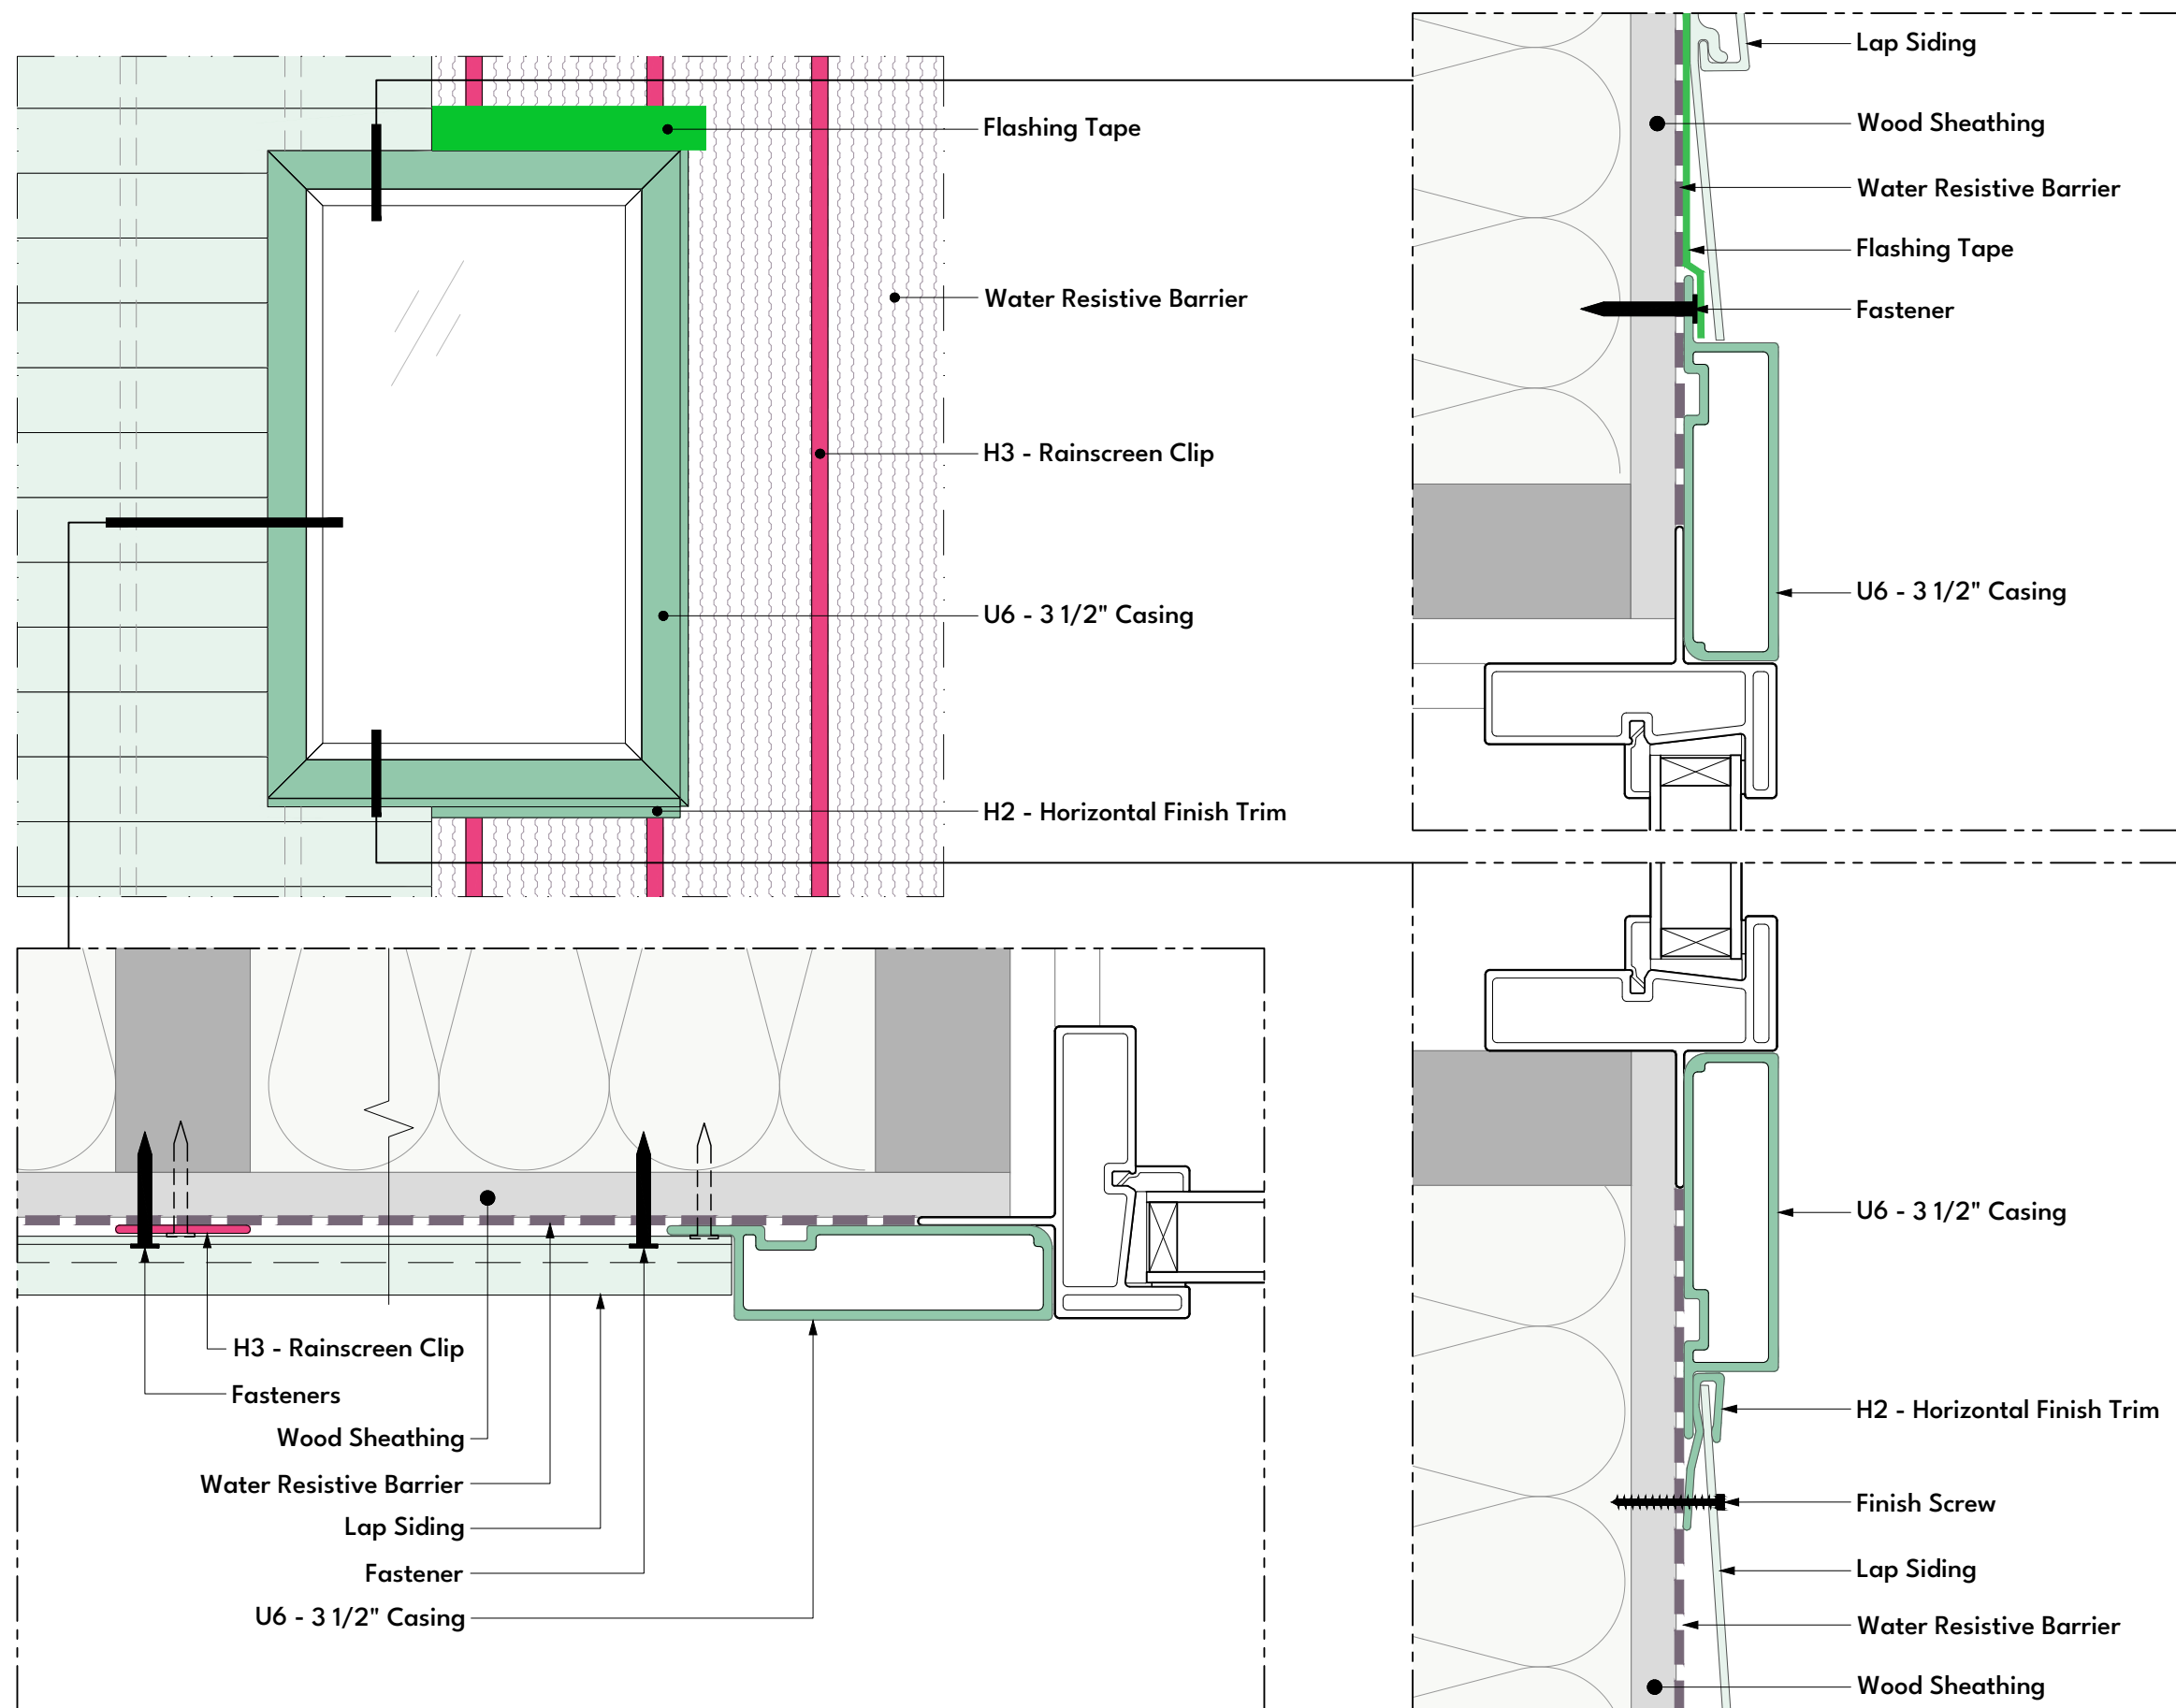


### NOTES:

- Windows and doors must be properly secured and flashed prior to siding installation.
- Water resistive barrier should be stapled on instead of cap nails.
- Fasteners should be 1 1/2" or longer

Inside Corner Detail

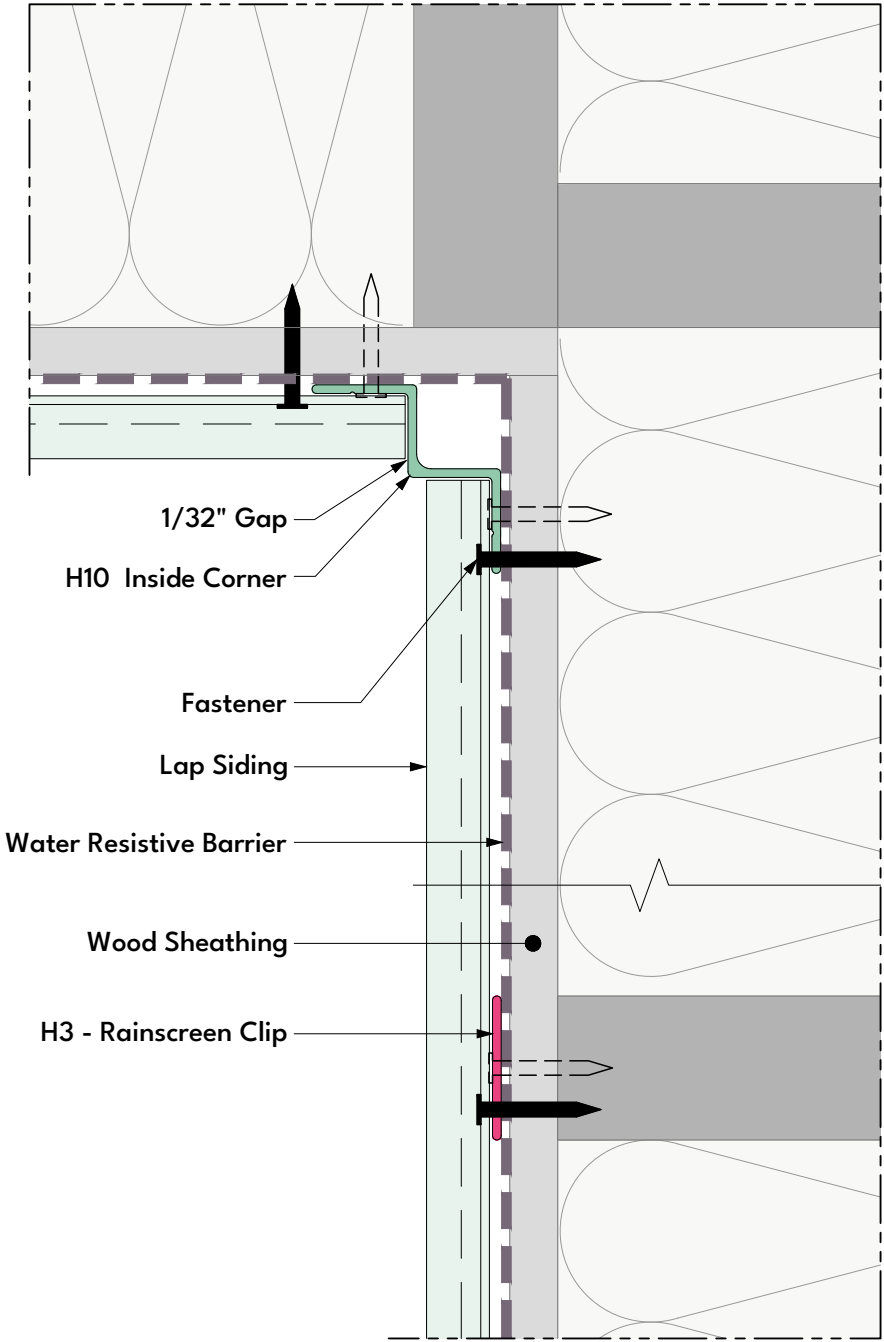


Outside Corner Detail

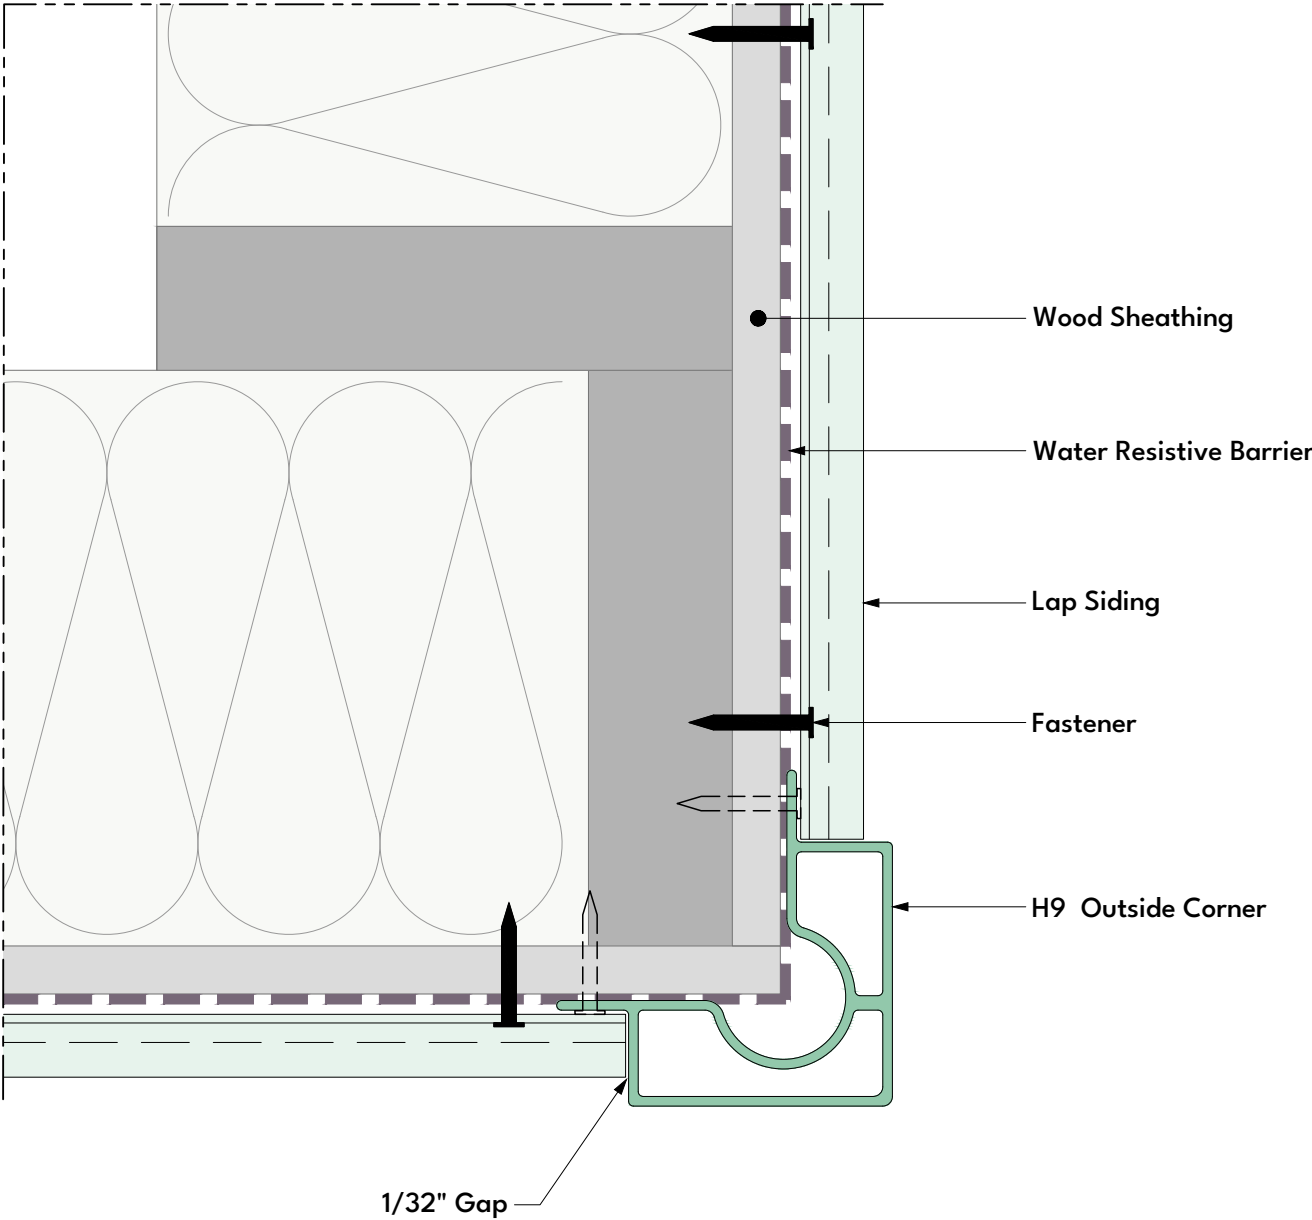


- NOTES:
- a) Windows and doors must be properly secured and flashed prior to siding installation.
  - b) Water resistive barrier should be stapled on instead of cap nails.
  - c) Fasteners should be 1 1/2" or longer

Horizontal Starter Details

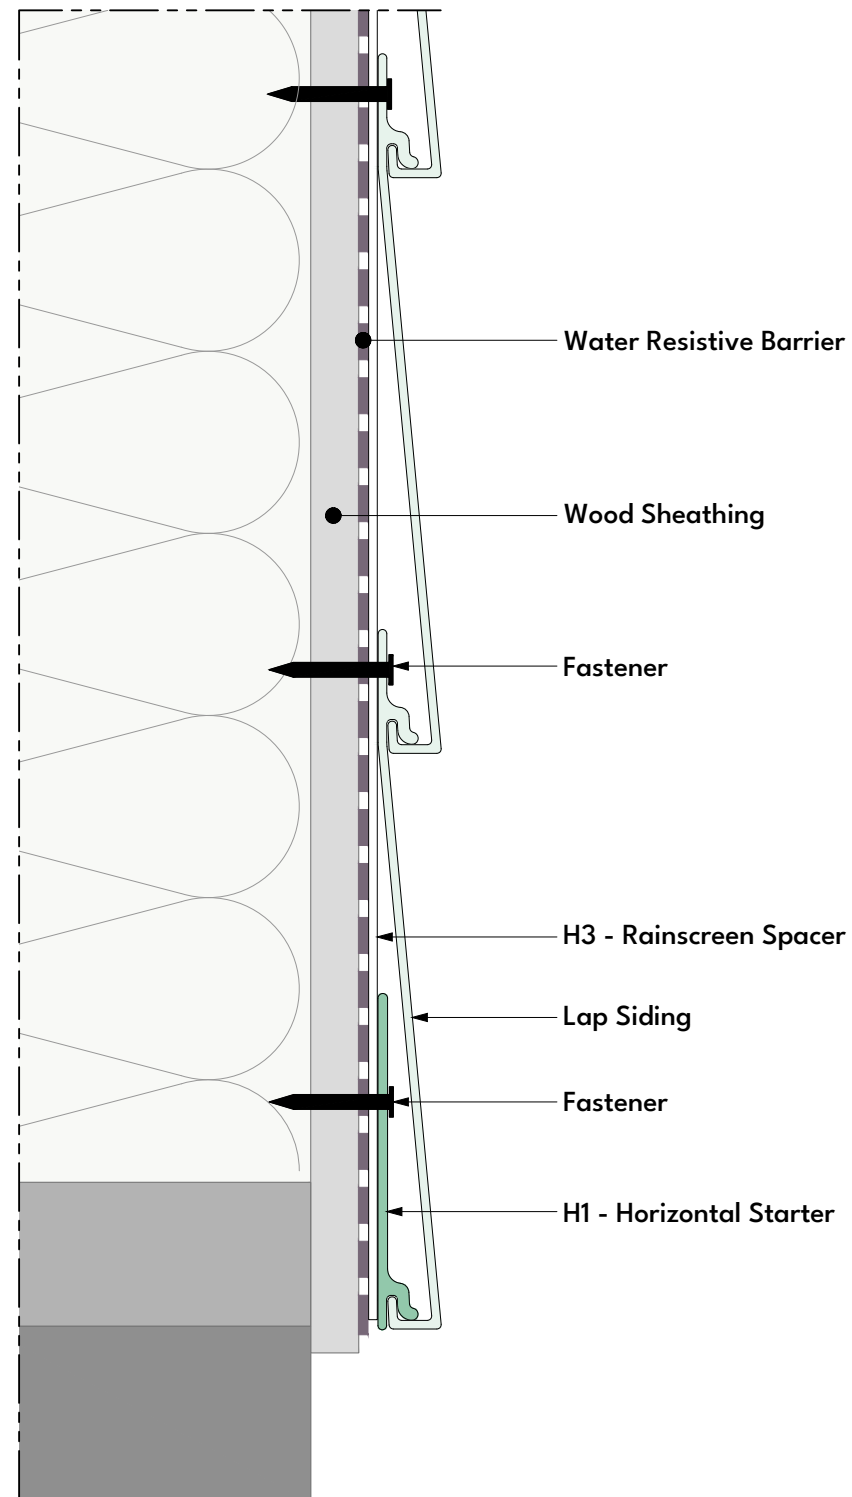


Horizontal Finish Trim Details

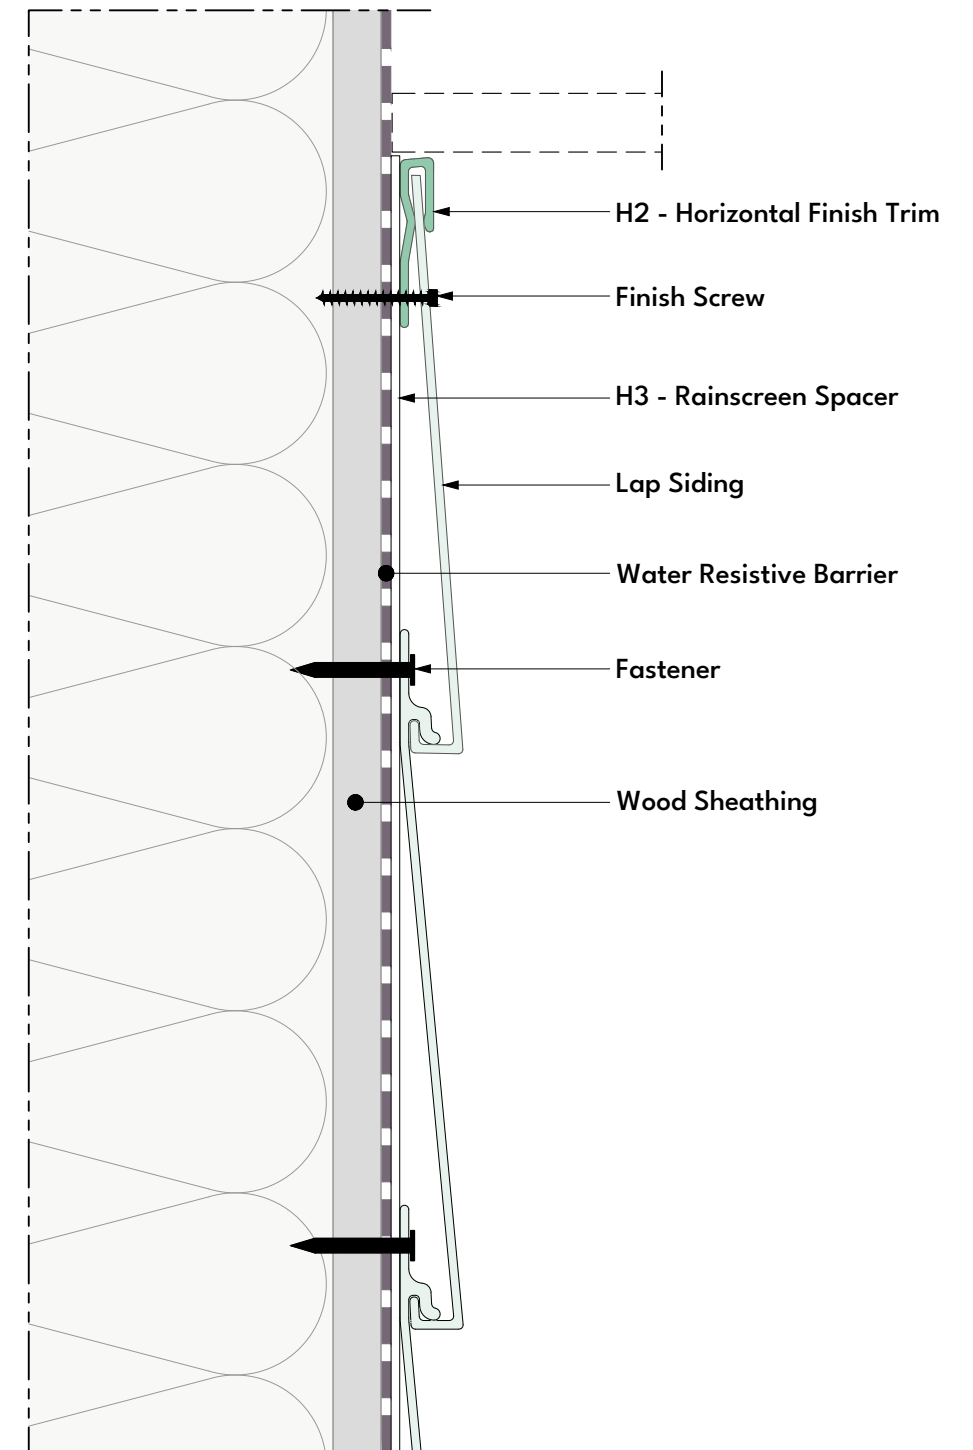


NOTES:

- Windows and doors must be properly secured and flashed prior to siding installation.
- Water resistive barrier should be stapled on instead of cap nails.
- Fasteners should be 1 1/2" or longer
- Horizontal Starter and Finish Trim should be Installed on top of rainscreen clip, J channel, Finish trim, and corners

### Vertical Starting Detail. Option #1

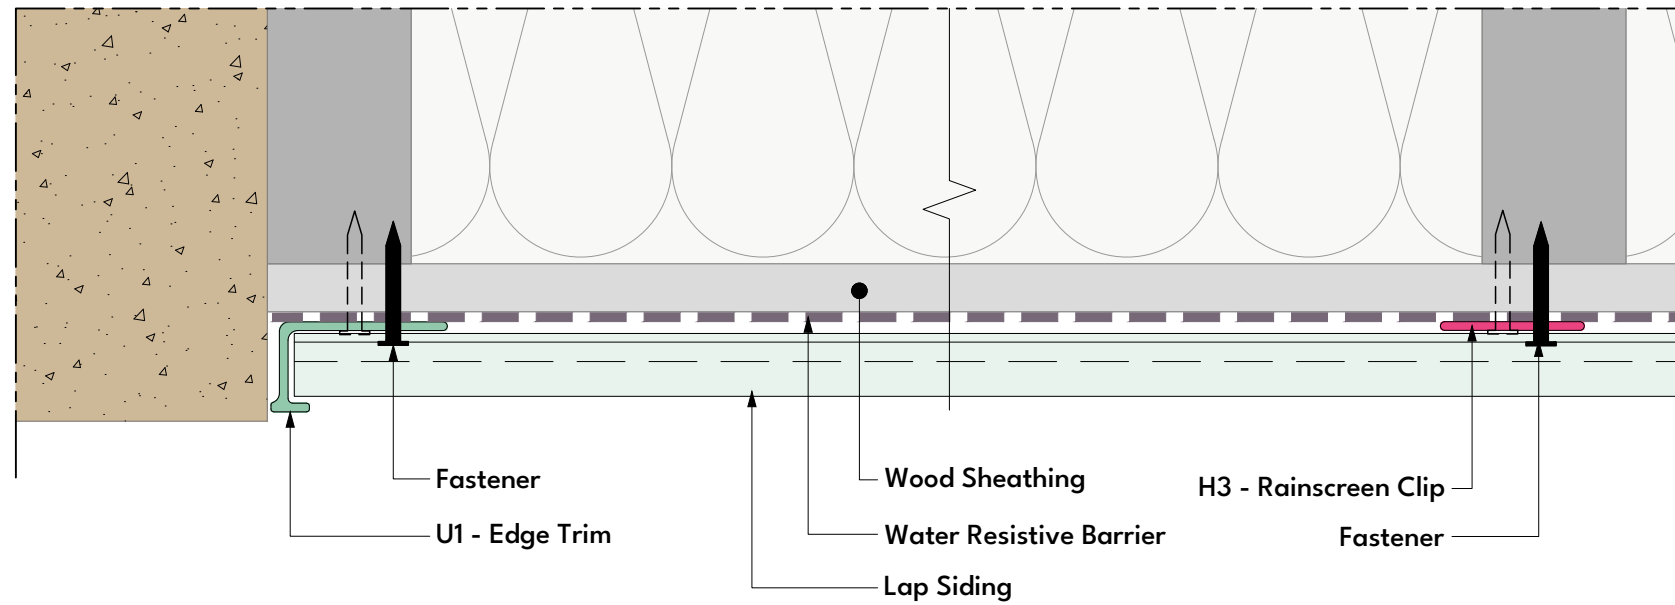



### Vertical Starting Detail. Option #2

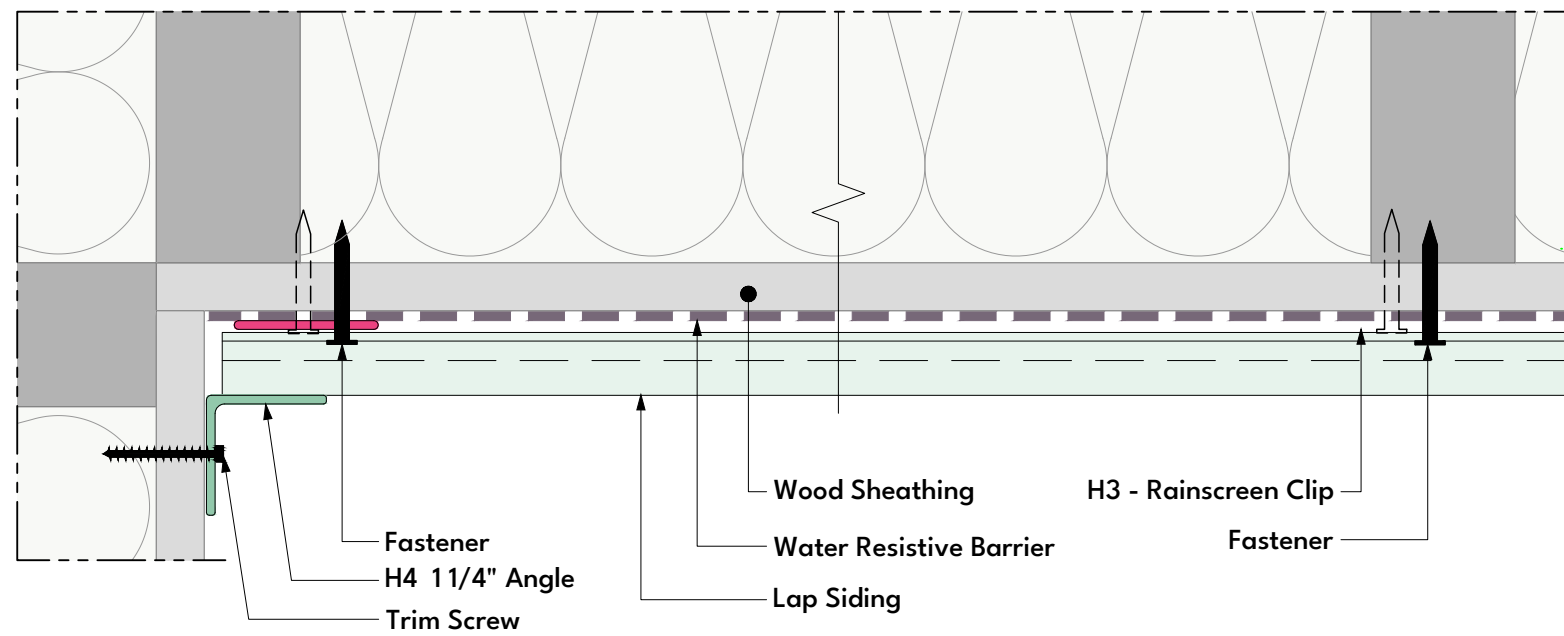

NOTES:


- a) Windows and doors must be properly secured and flashed prior to siding installation.
- b) Water resistive barrier should be stapled on instead of cap nails.
- c) Fasteners should be 1 1/2" or longer

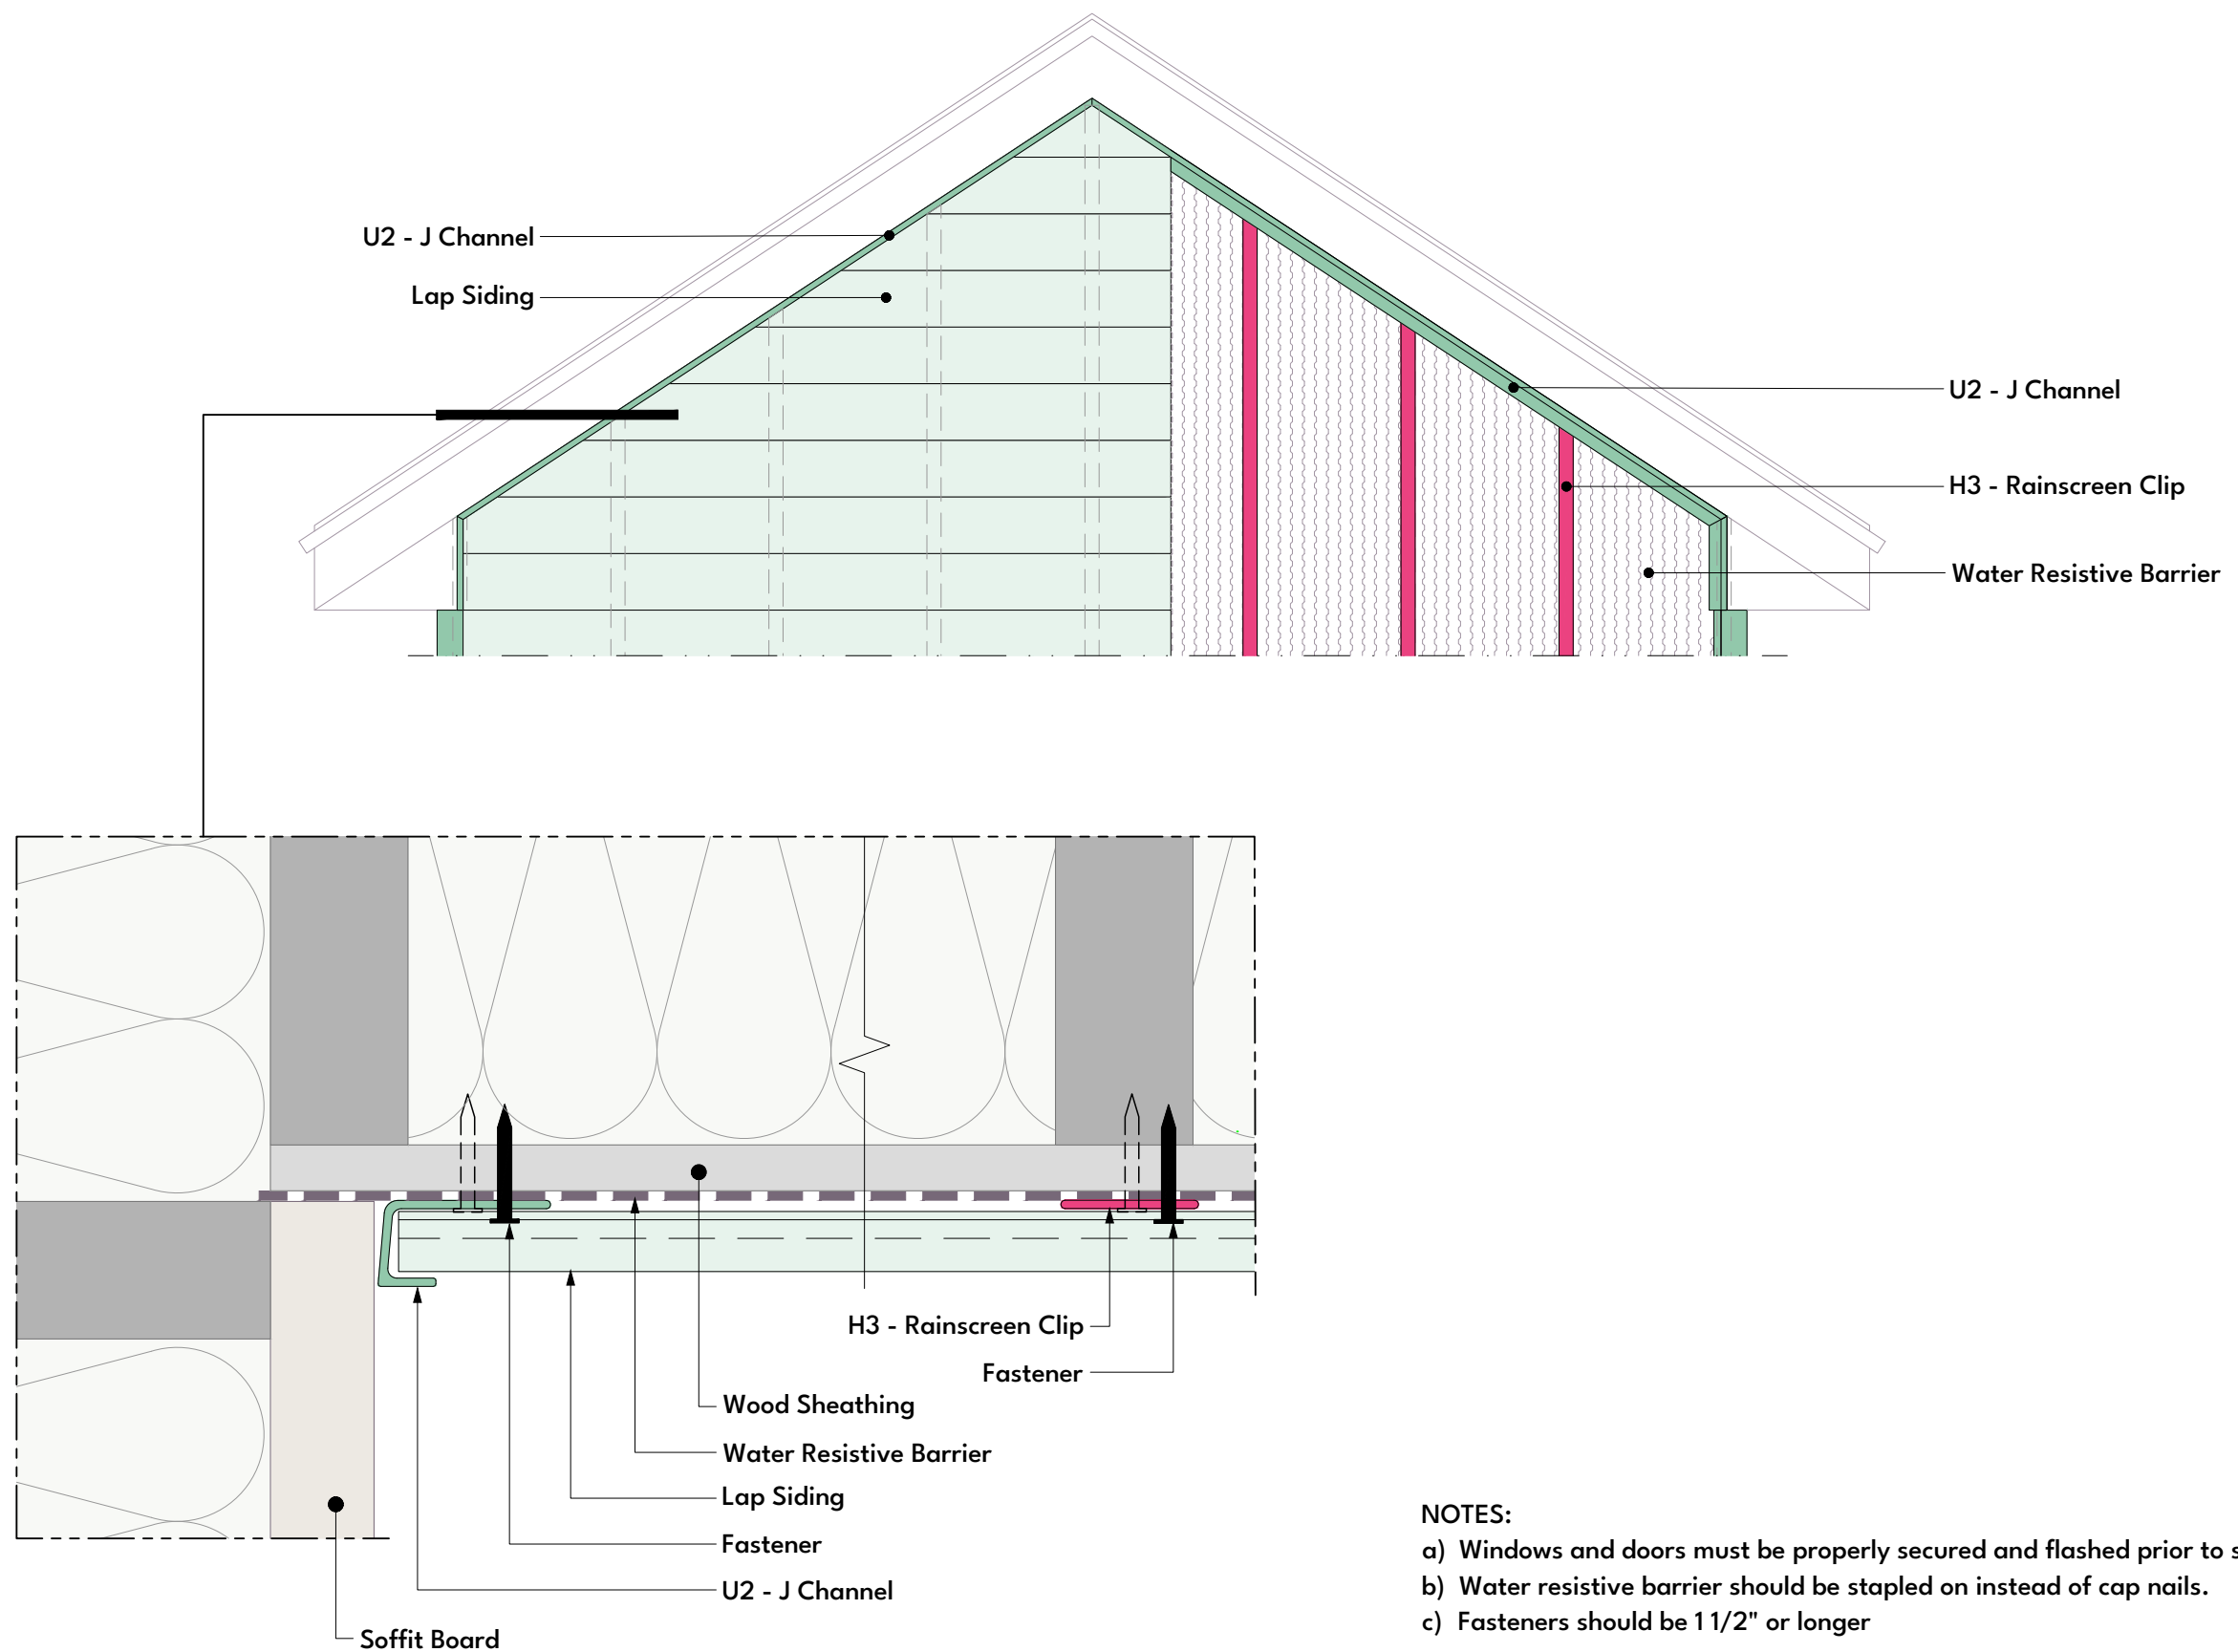

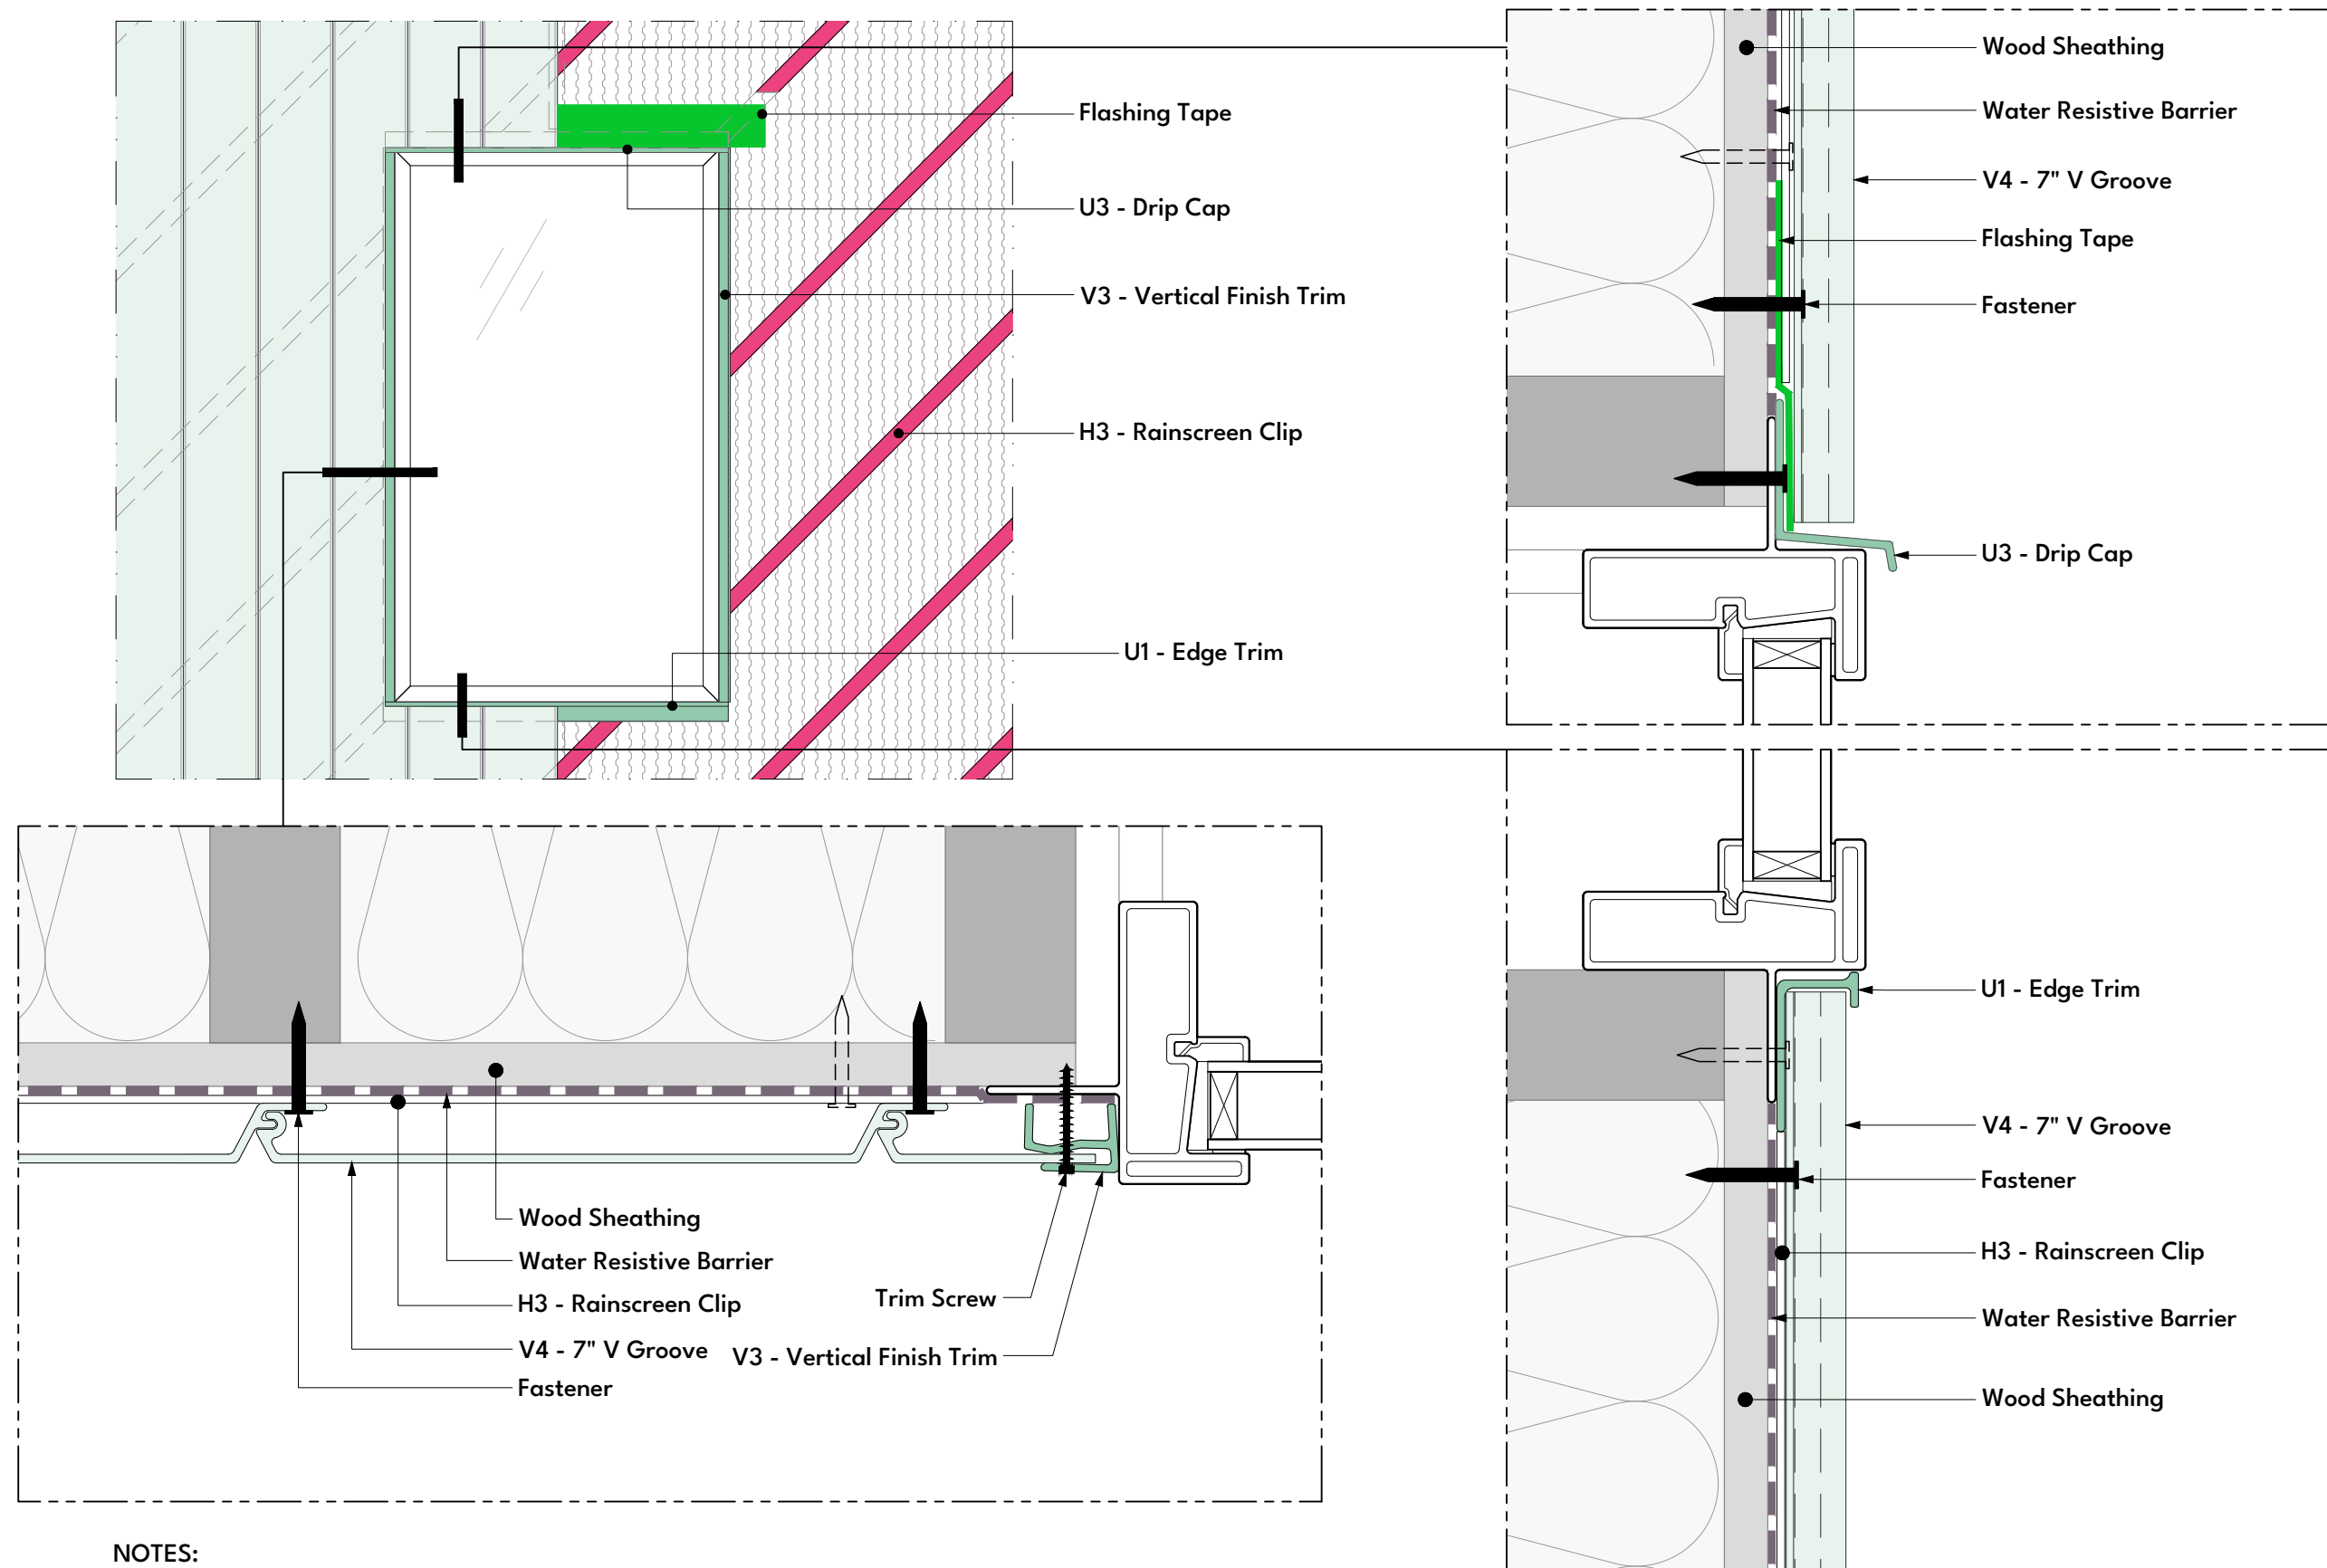

**NOTES:**


- Windows and doors must be properly secured and flashed prior to siding installation.
- Water resistive barrier should be stapled on instead of cap nails.
- Fasteners should be 1 1/2" or longer

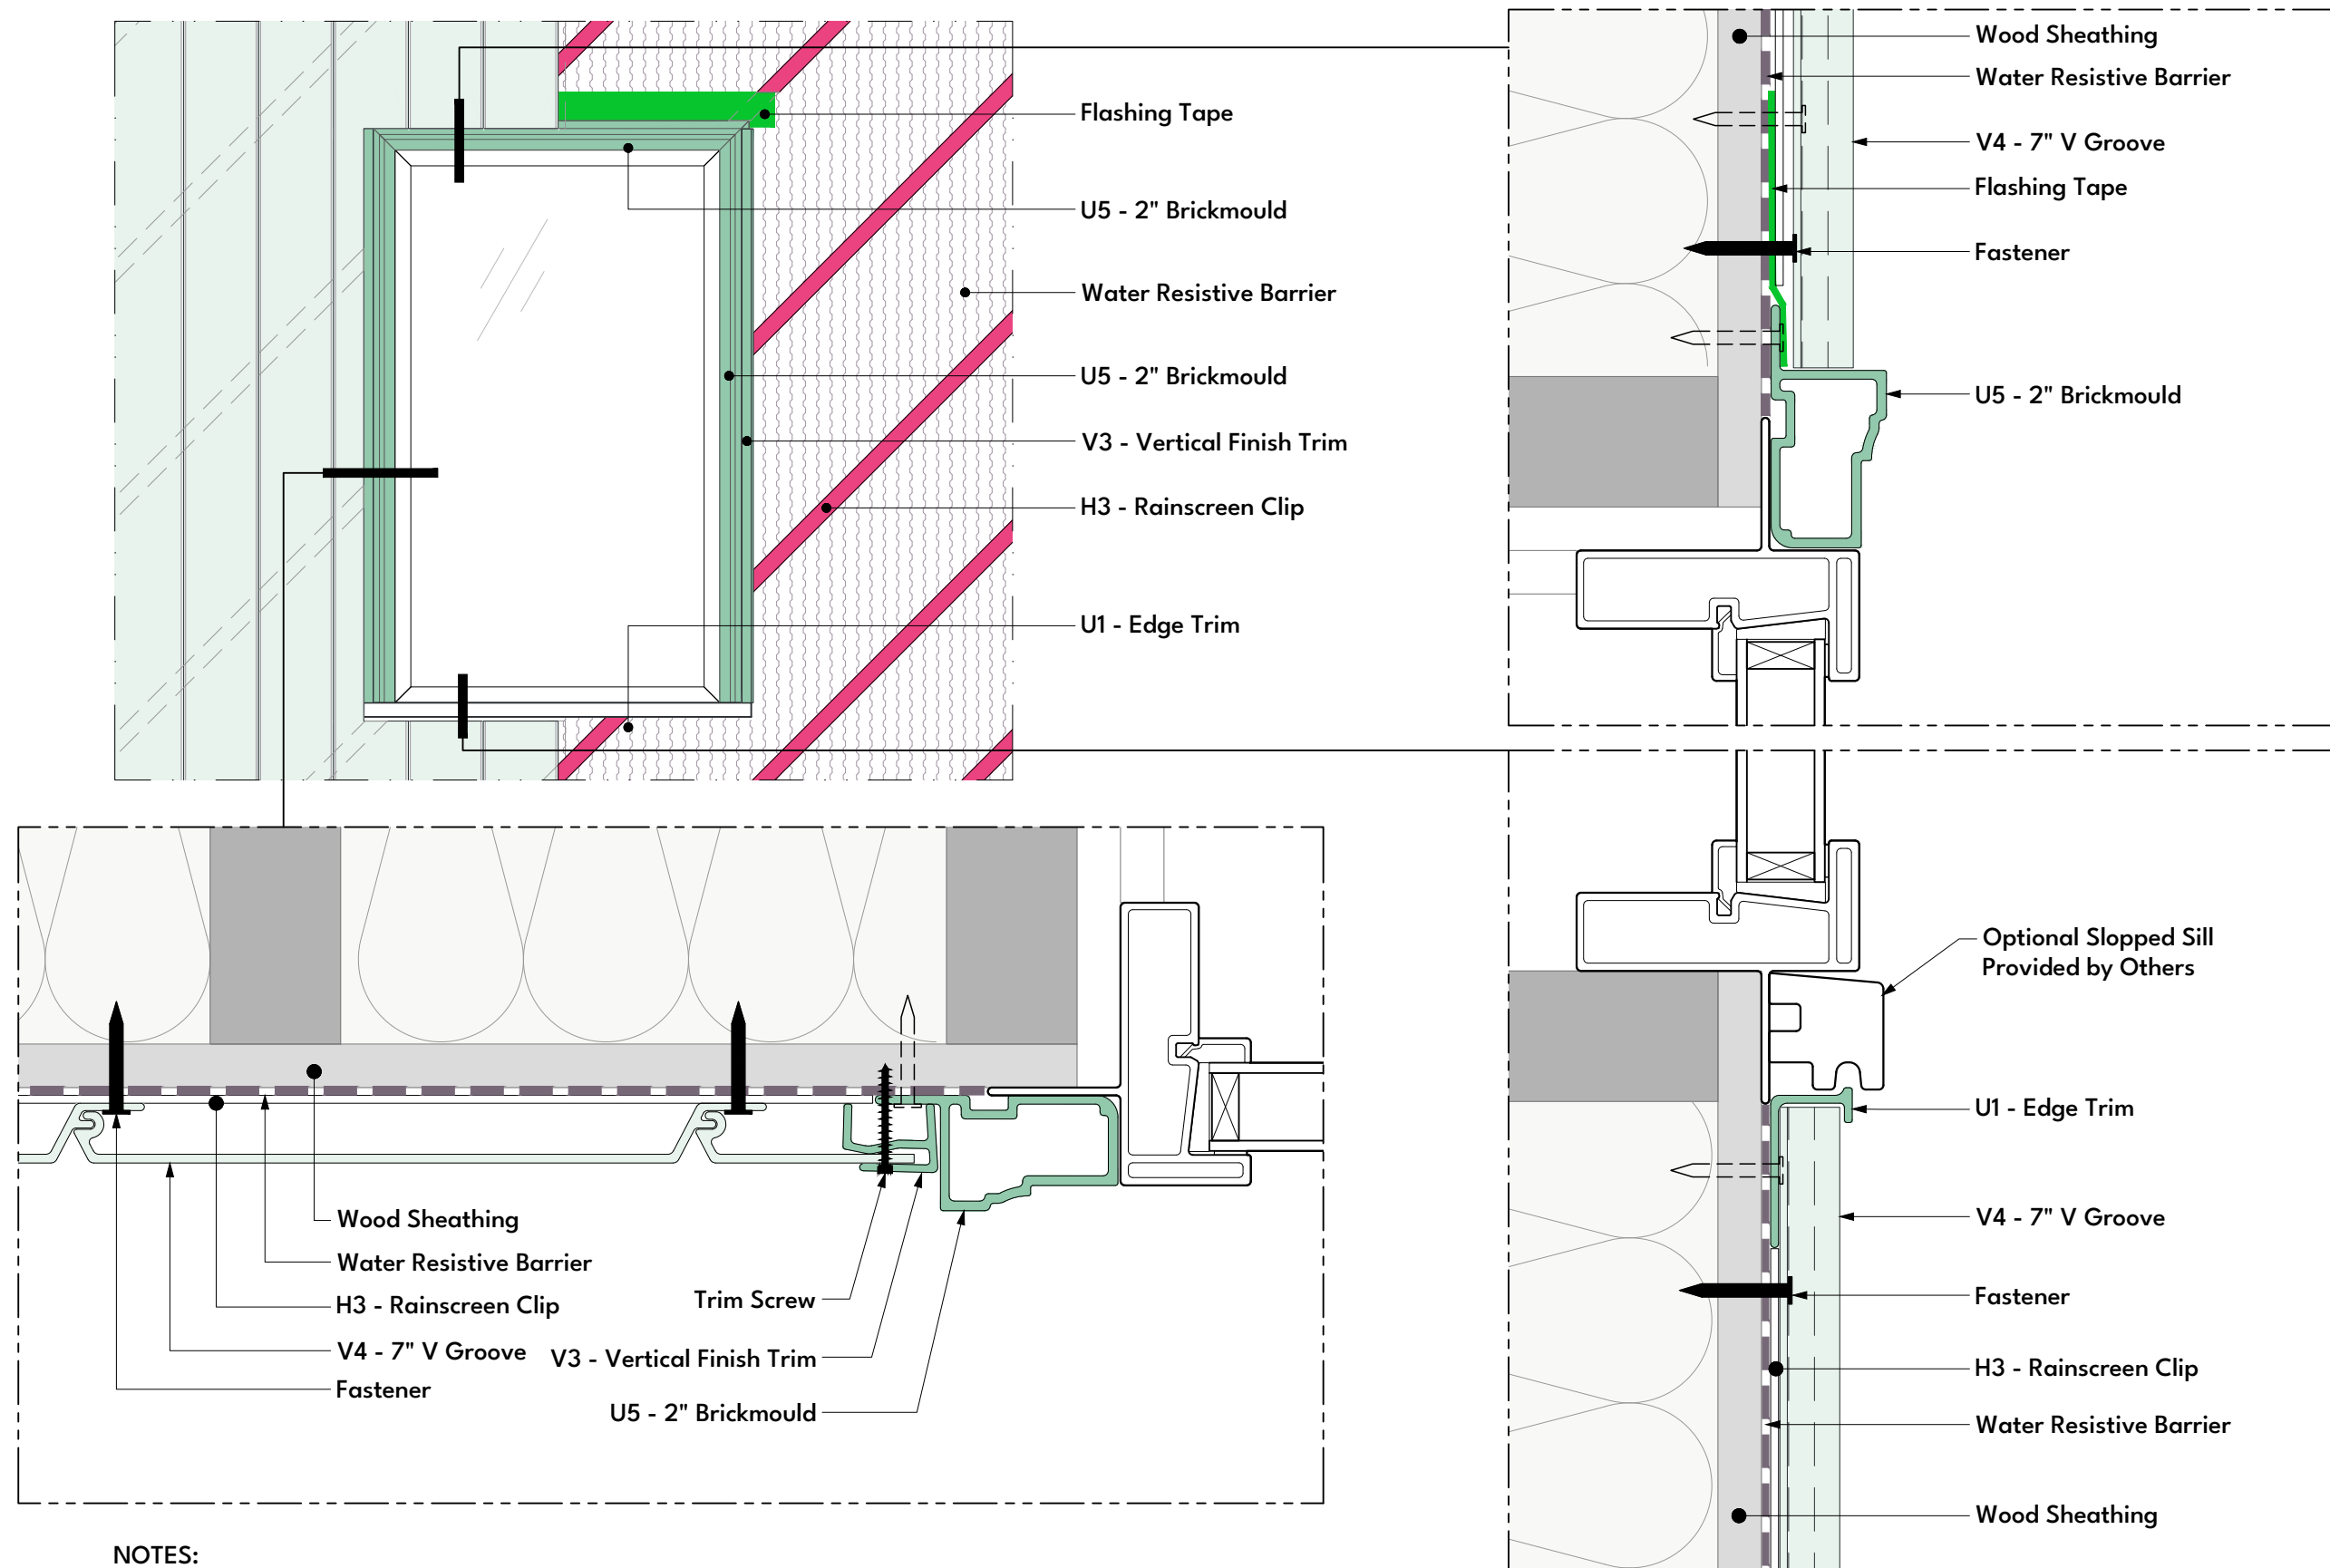


### NOTES:

- Windows and doors must be properly secured and flashed prior to siding installation.
- Water resistive barrier should be stapled on instead of cap nails.
- Fasteners should be 1 1/2" or longer


Option #1. Starting from Wall Midpoint

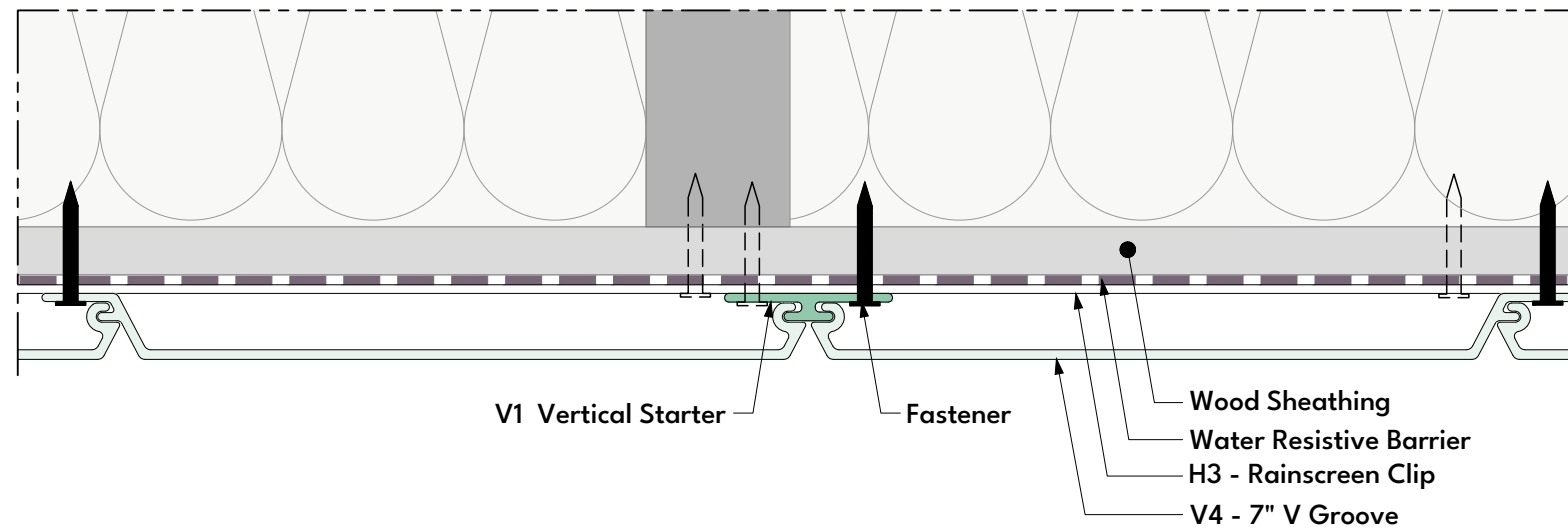


Option #2. Starting from Inside Corner

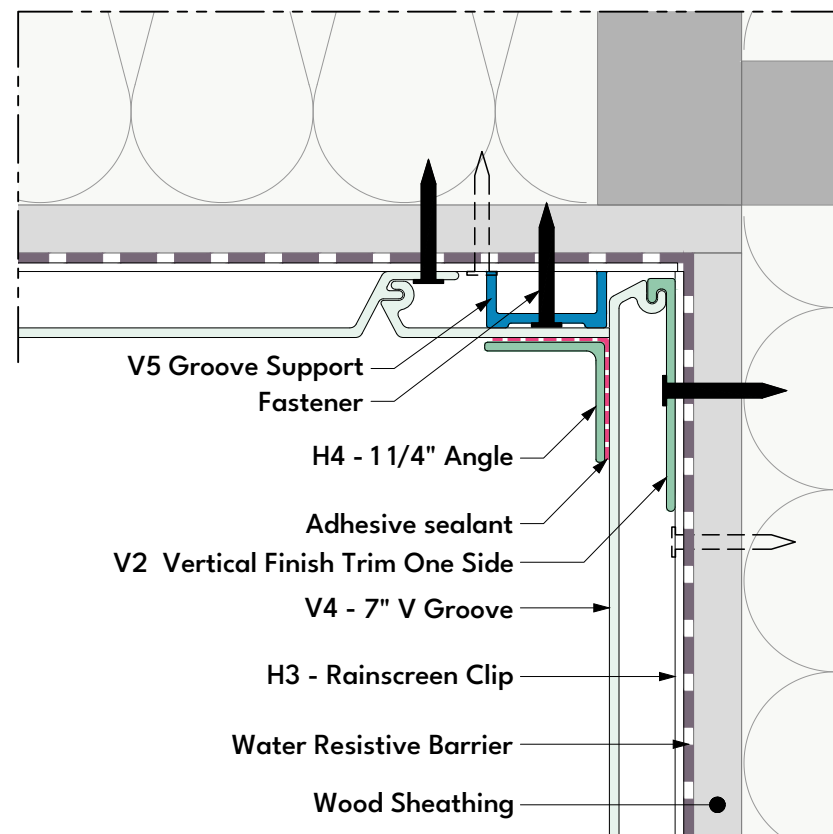

Option #3. Starting from Outside Corner

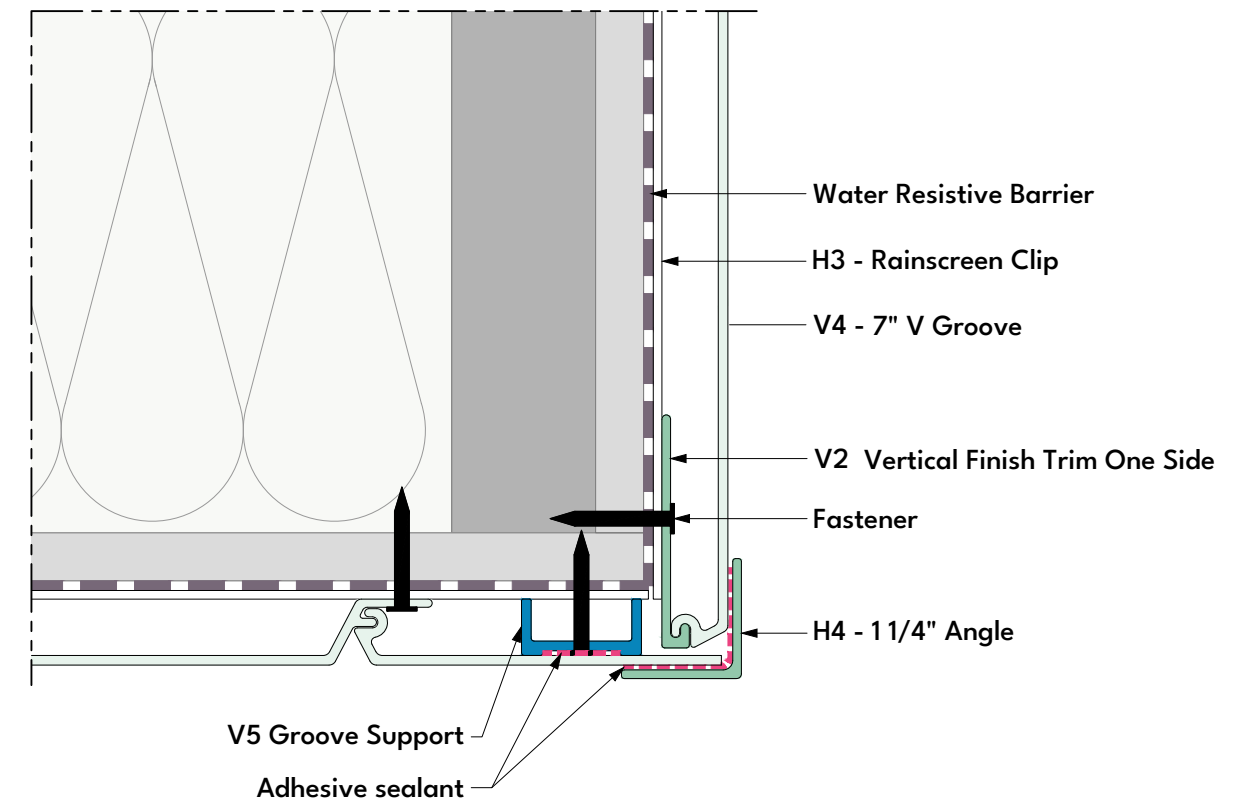


Option #4. Starting from Outside Corner.  
Transition from Horizontal to Vertical Siding

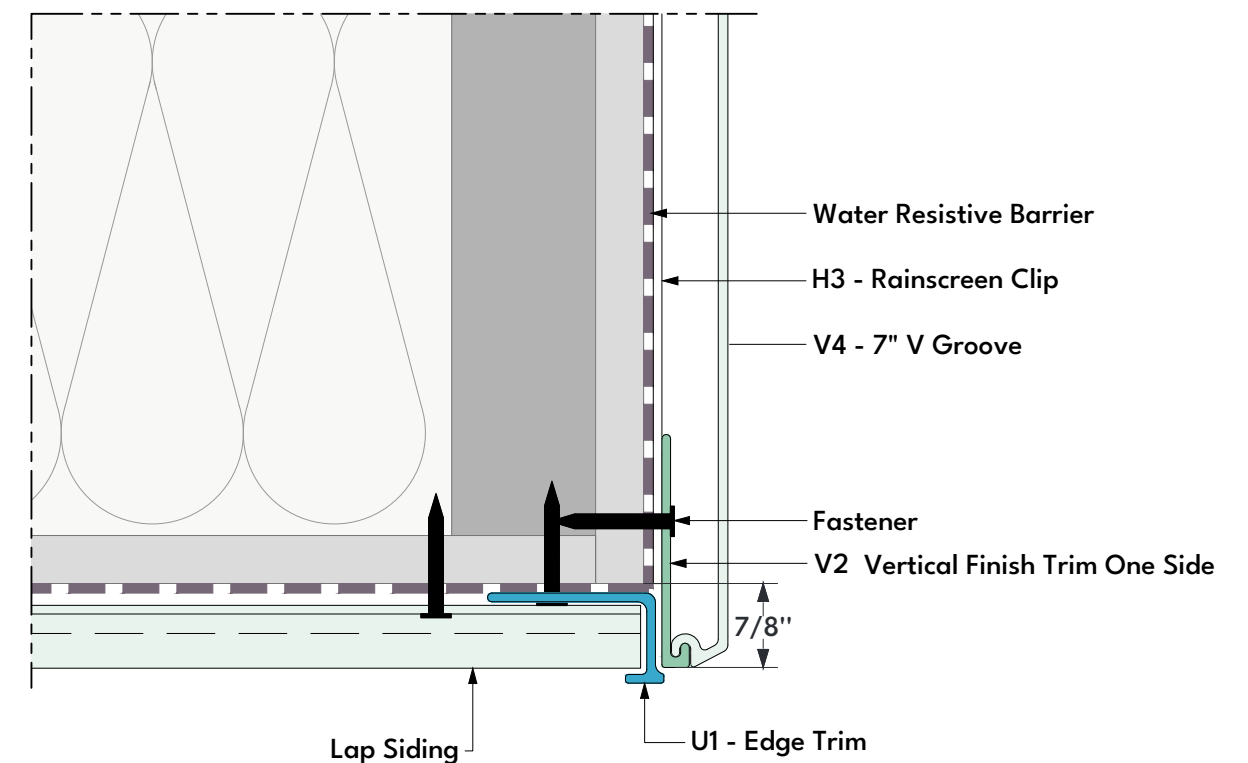


**NOTES:**

- Windows and doors must be properly secured and flashed prior to siding installation.
- Water resistive barrier should be stapled on instead of cap nails.
- Fasteners should be 1 1/2" or longer

Inside Corner Detail

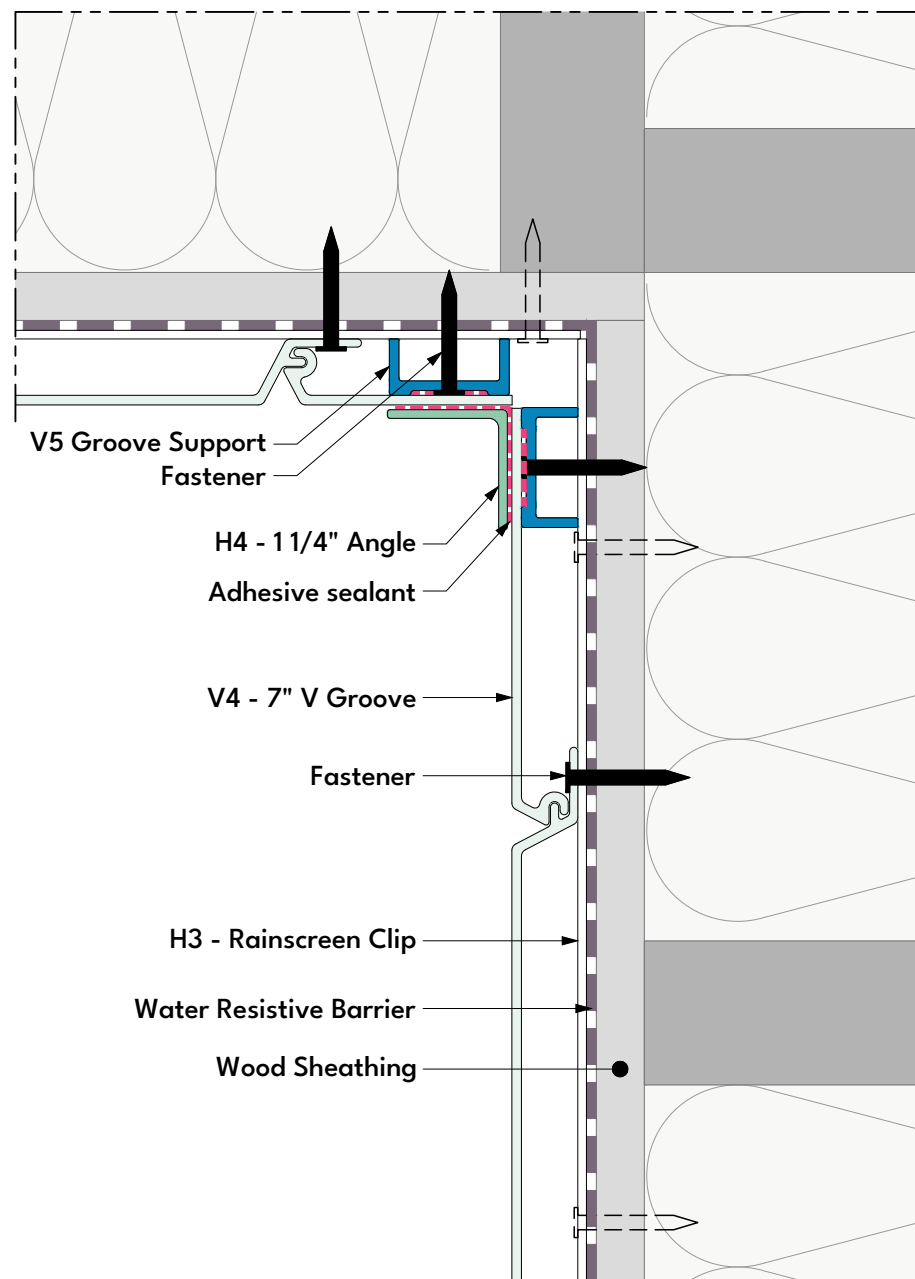

Outside Corner Detail

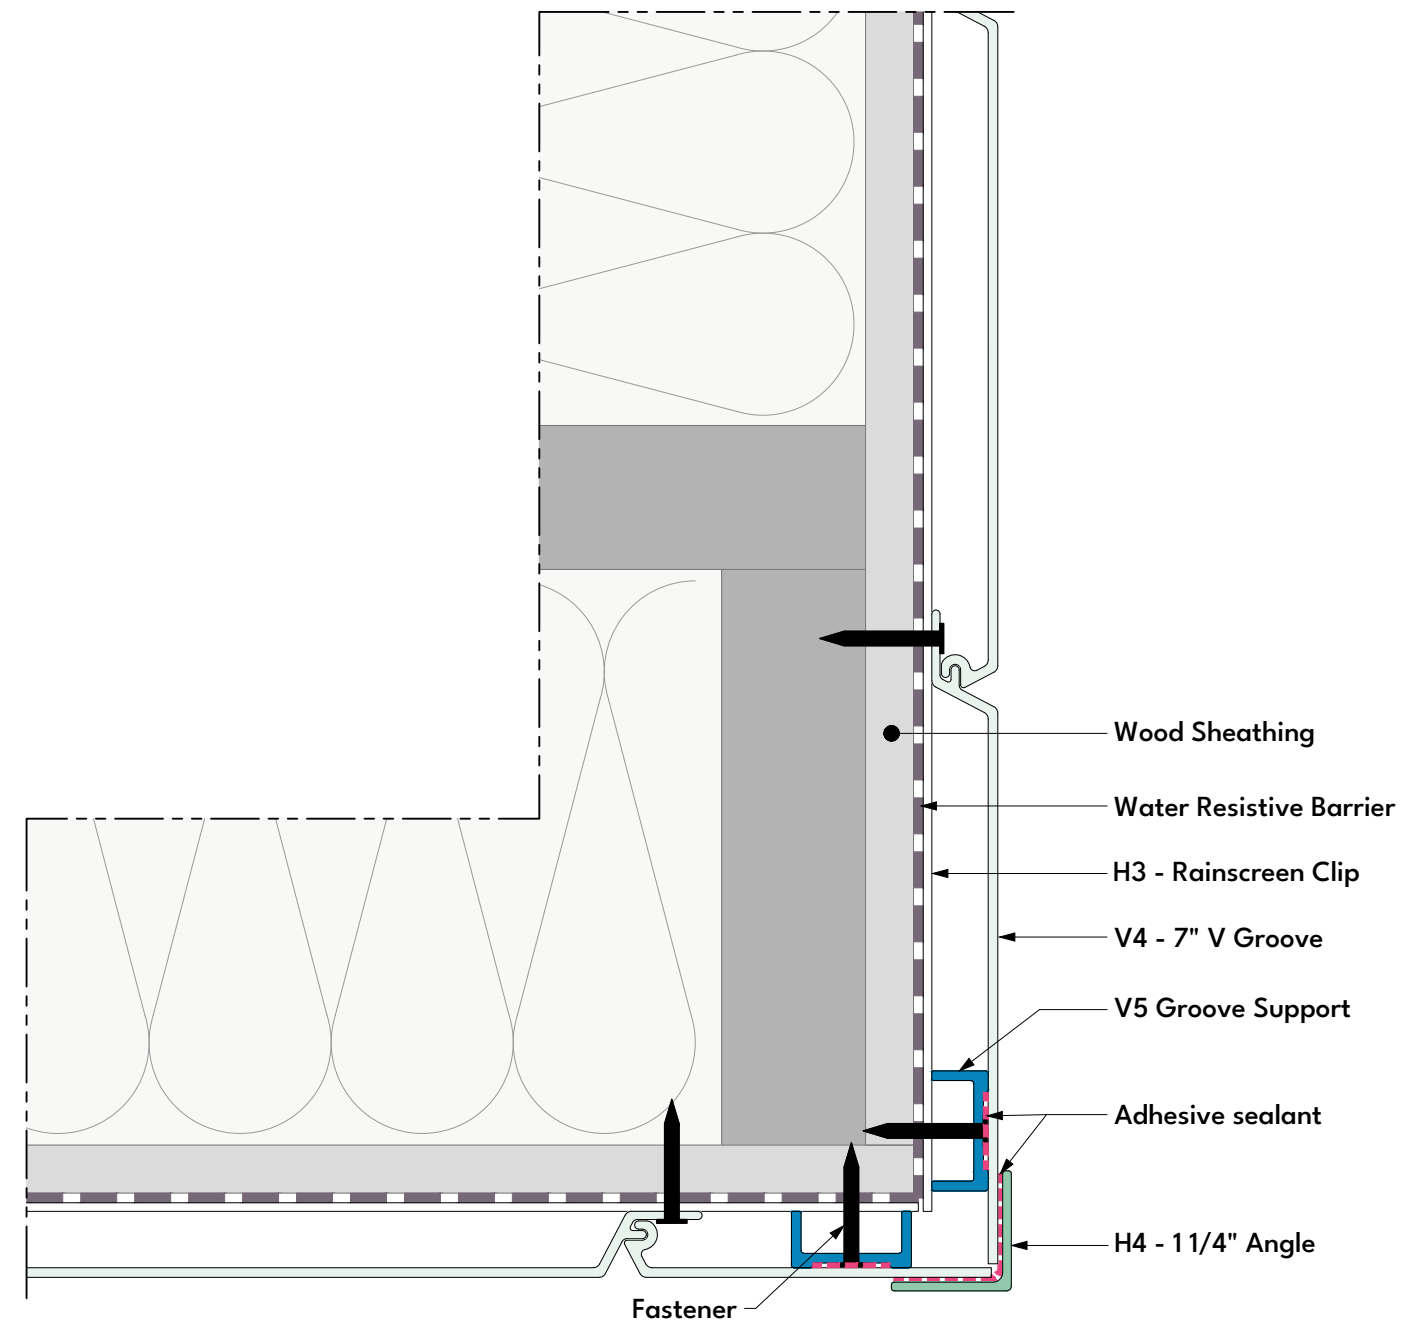

**NOTES:**

- Windows and doors must be properly secured and flashed prior to siding installation.
- Water resistive barrier should be stapled on instead of cap nails.
- Fasteners should be 1 1/2" or longer